




Step 1: Assemble BASE PLATE, LEFT PANEL AND RIGHT PANEL with bolts provided as shown on the drawing.

Step 2: Install two back panels.


Step 3: Install the top panel.

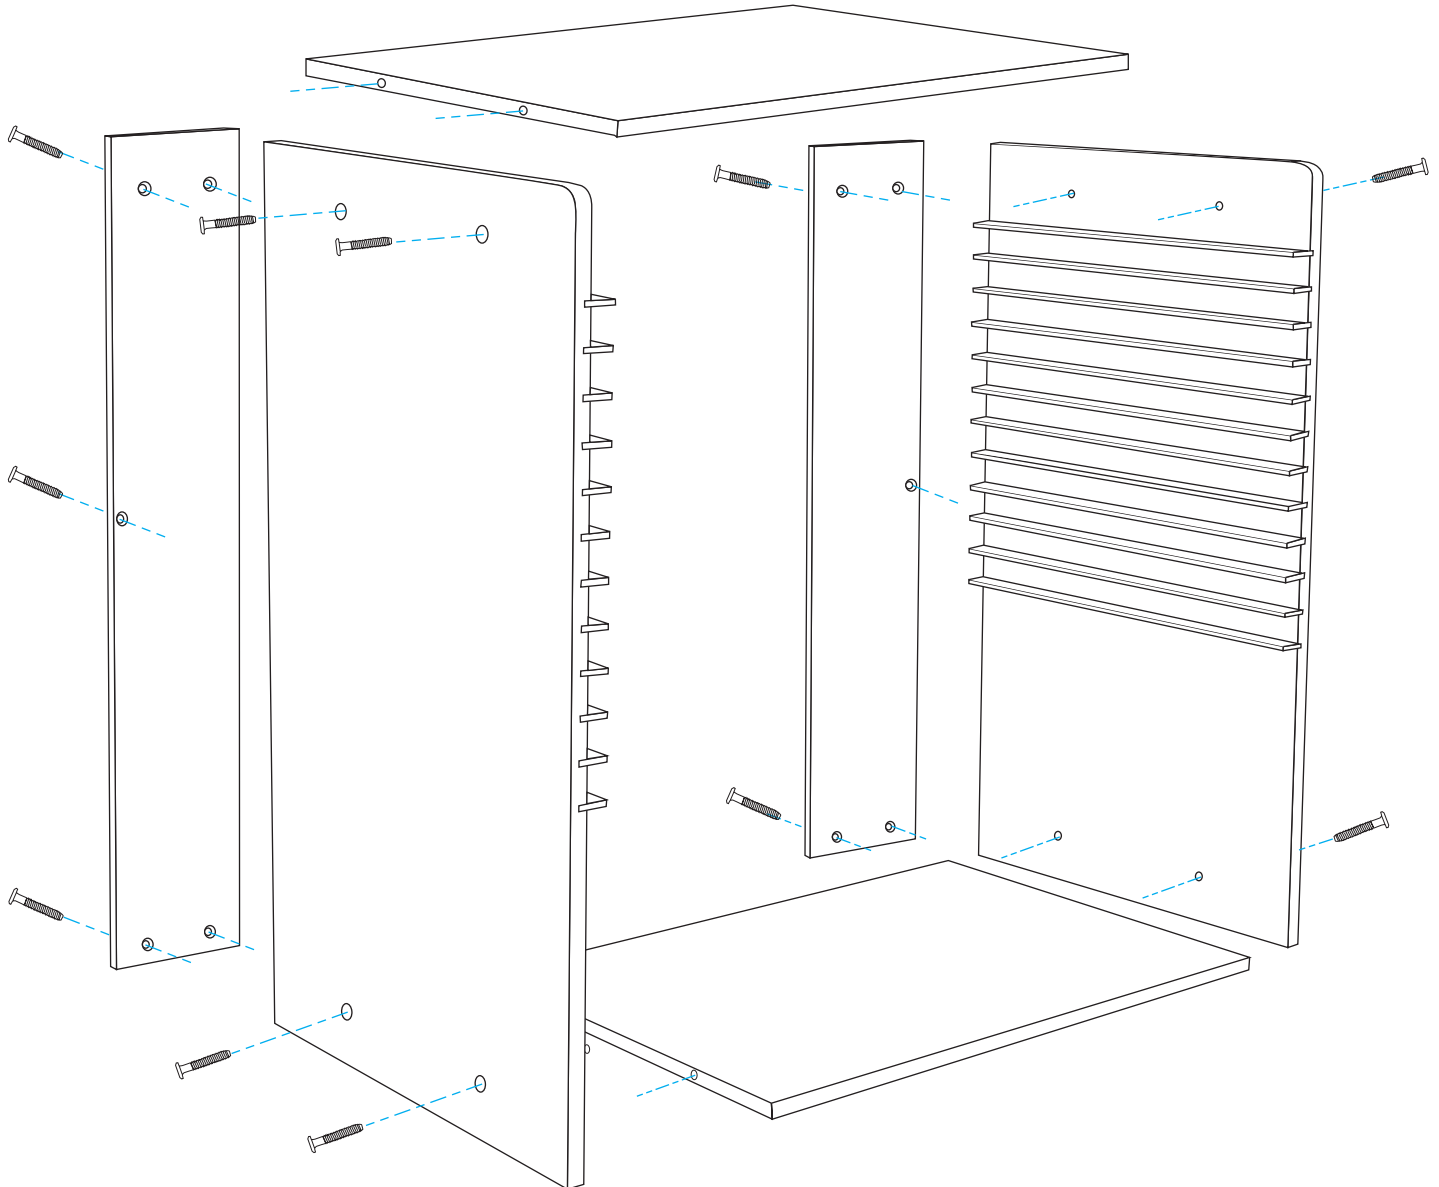

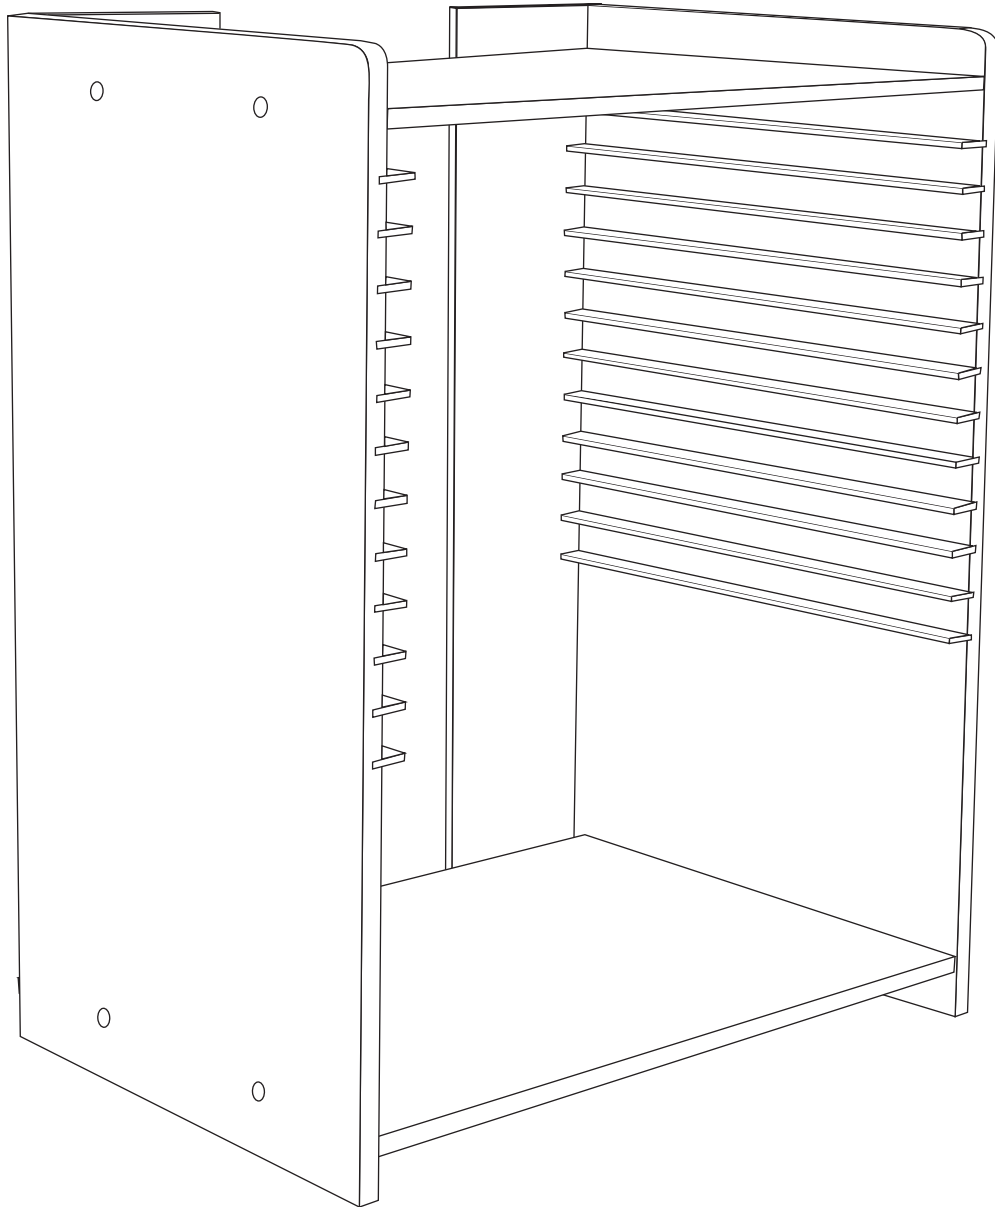


 Alison's Montessori (c) 2010. No part of this PDF may be copied, shared or re-sold without permission


Accessories & Tools required

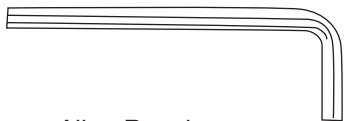

Allen Ranch



Star head Screwdriver (not Included)

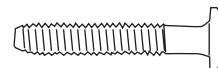

Bolt



Small screw