


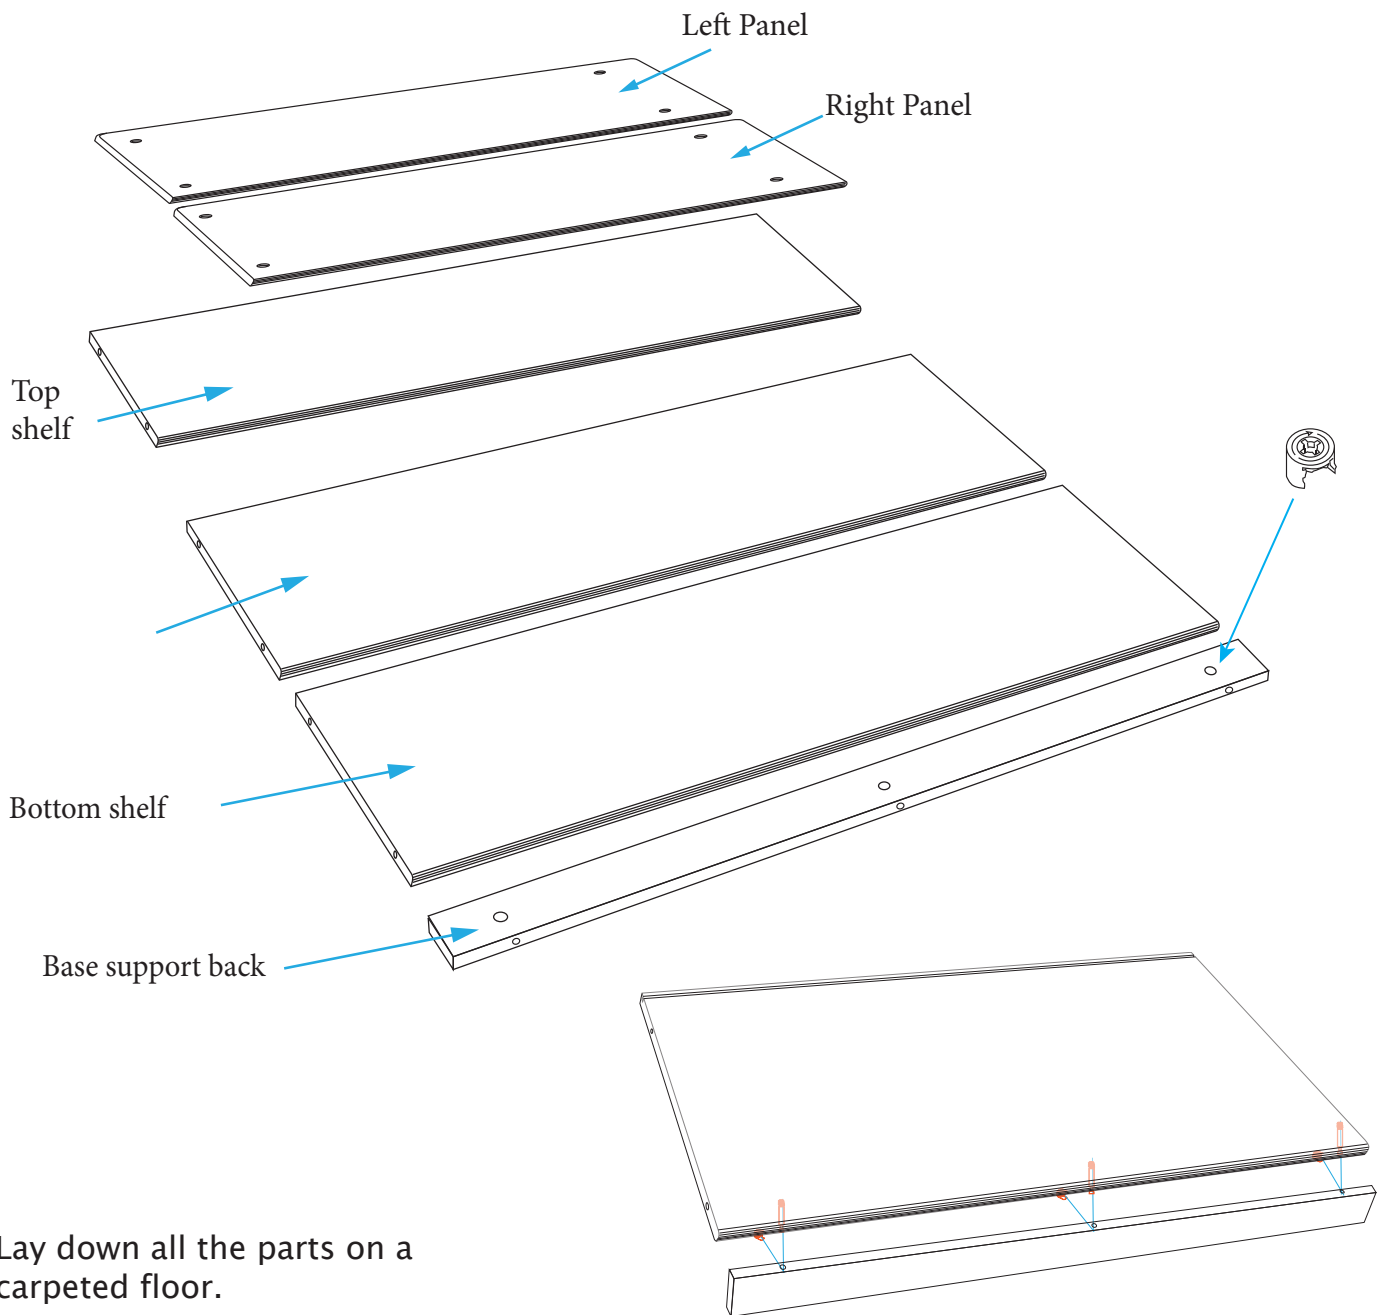

Lay down all the parts on a carpeted floor.

Identify the parts as shown on the drawing.

Keep all the necessary tools handy.

Follow the installation instructions.

Step 1: Assemble base support with Base Plate as shown with Toggle nuts and bolts provided. Toggle bolts to be screwed in the bottom side holes of Base Plate.

Accessories & Tools required



Allen wrench




Black Bolt Qty-12



Toggle Bolt Qty-4 sets



F111- Small Rubberwood Shelf w/o Back

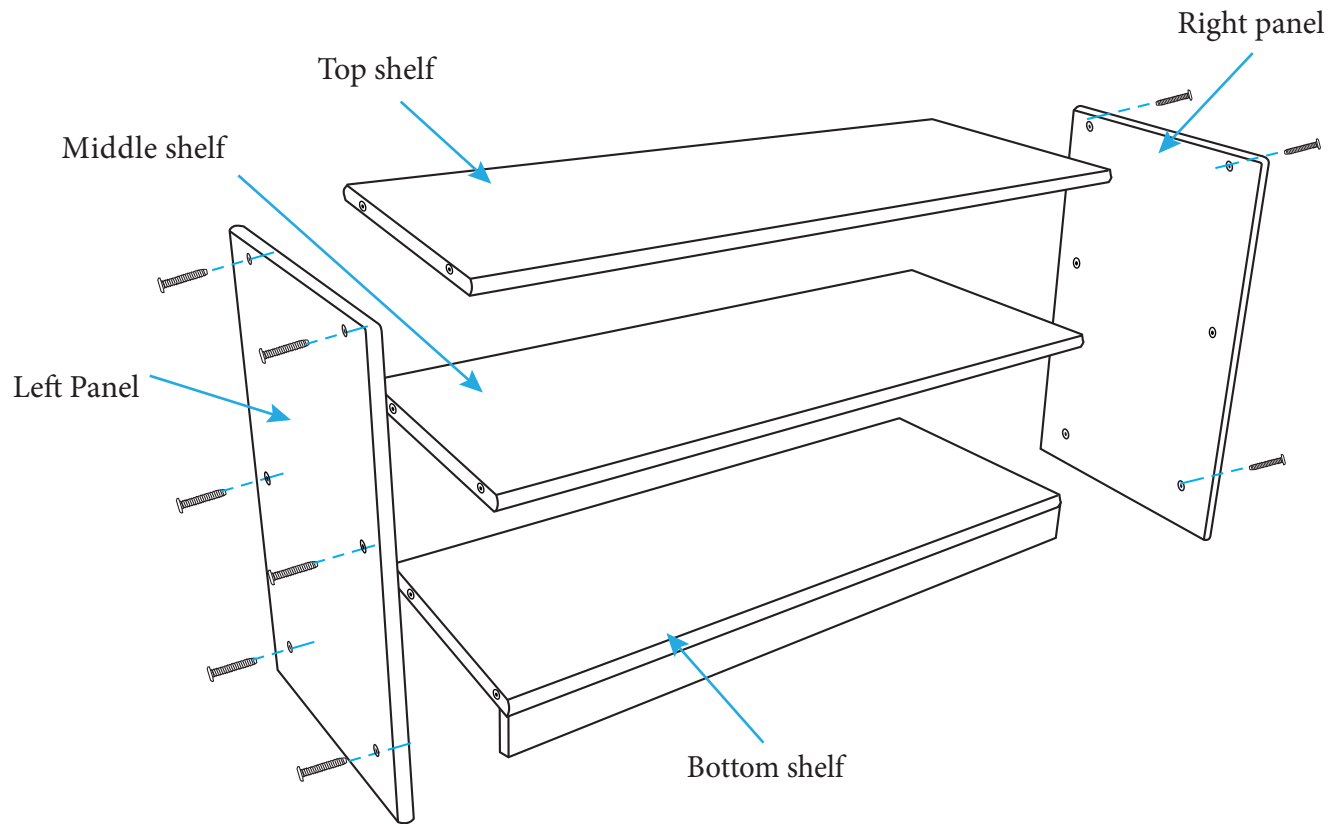


Step 2: Install two side panels, right and left on both side of Base Plate with Black Bolts.

Step 3: Install BOTTOM BACK PANEL in the grooves.

Step 4: Install Middle shelf as shown with Black Bolts.

Step 5: Insert back panels on the groove.

Step 6: Install the top shelf as shown with Black Bolts.

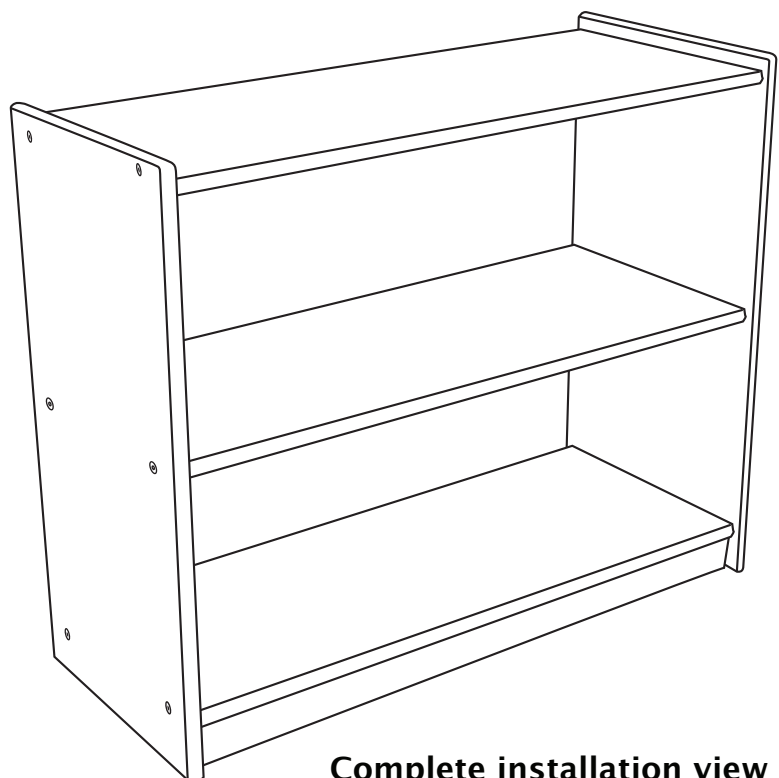

Complete installation view