



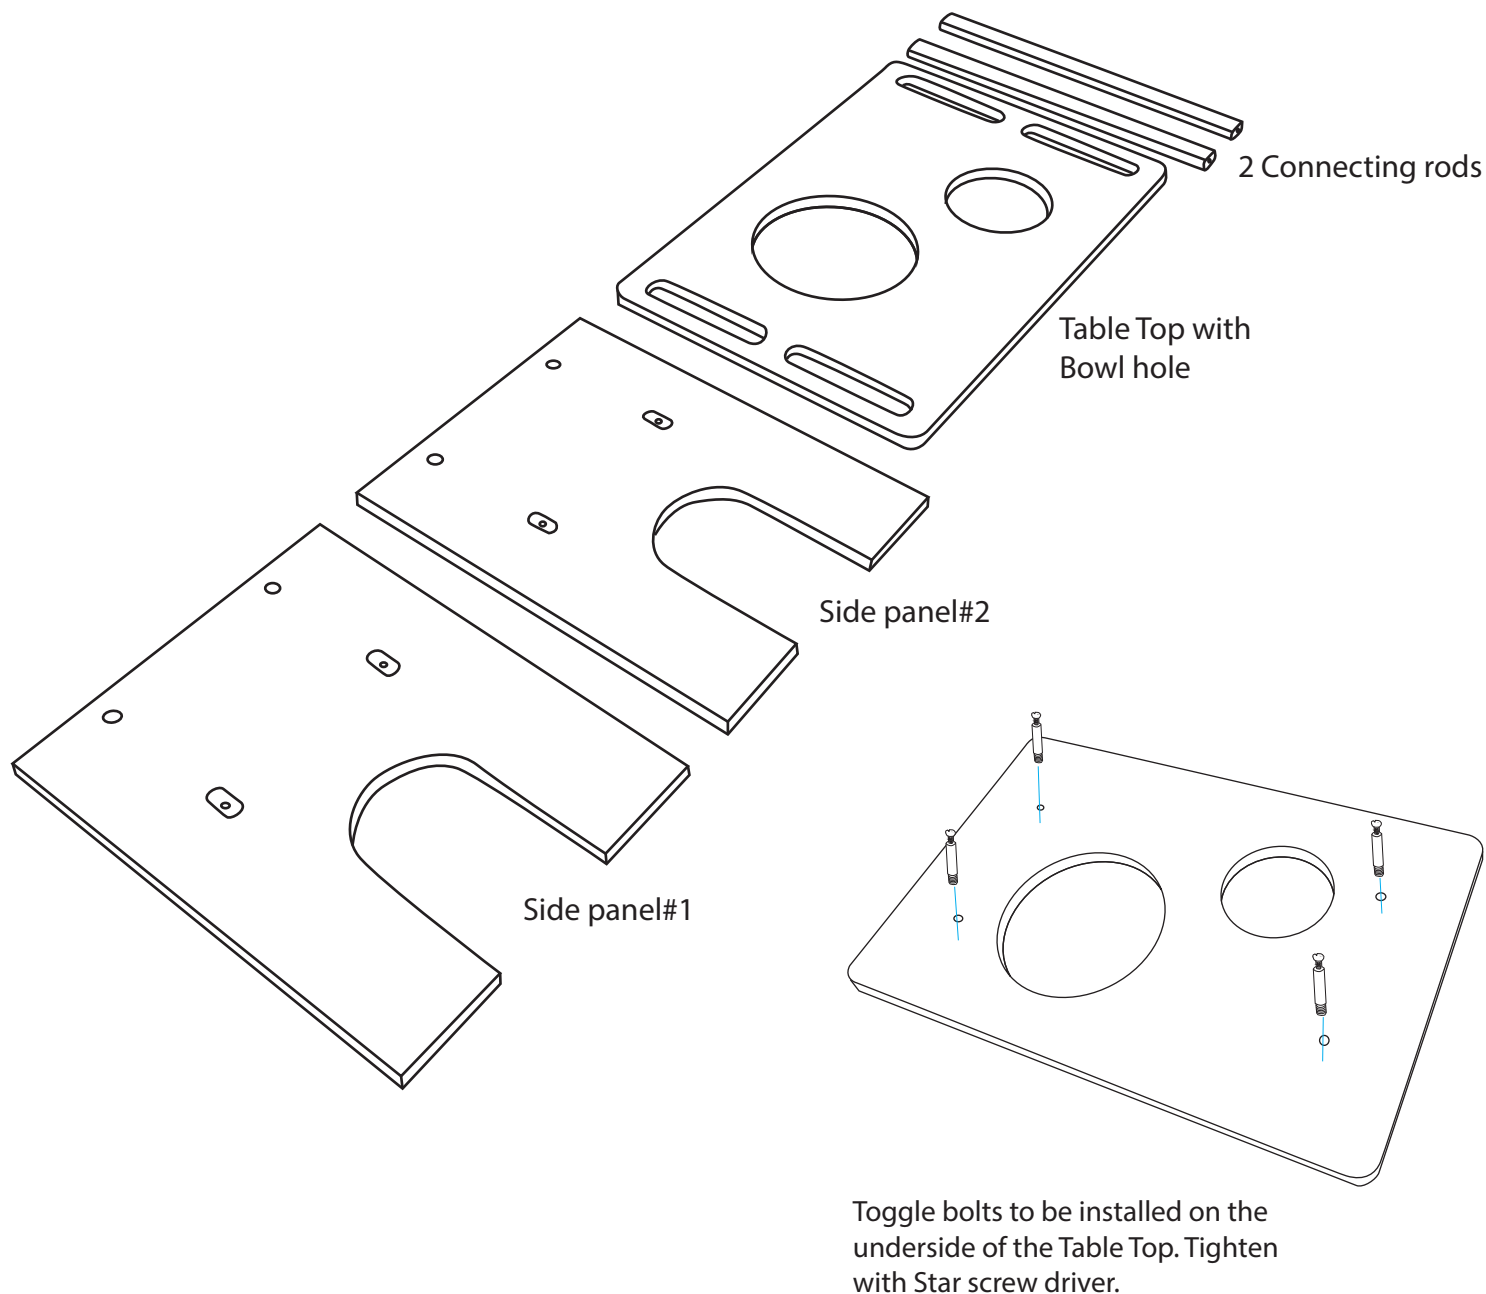


Unpack the box and check the parts and accessories prior installation.
Place all wooden parts on carpeted area to avoid damage or scratch on surface.

Tools needed: Star and Flat head screwdrivers

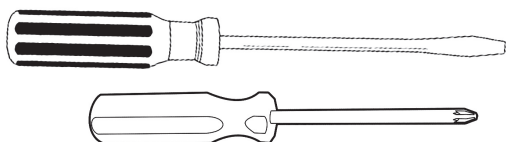


Allen wrench



4 Allen Screws



4 Toggle nuts




4 Toggle bolts




F177 - Hand Washing Table, Small - Premium Quality

Holes for inserting
Toggle bolt


Toggle bolts shall be placed with
arrow mark pointing Upwards.

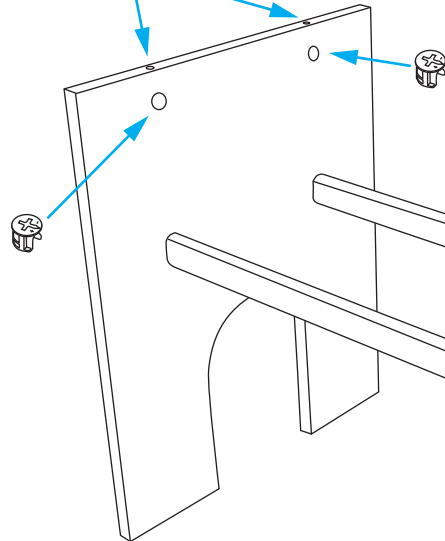


Holes for inserting
Toggle bolt

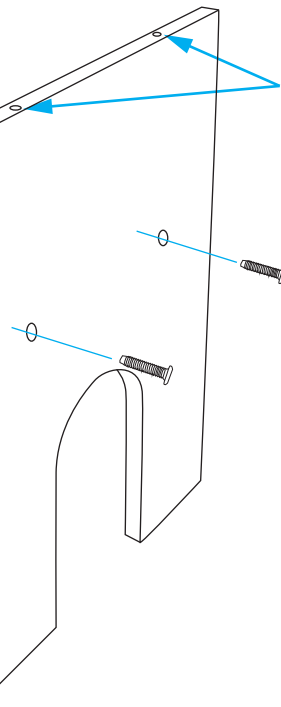

Side panels to be assembled with 2 connect-
ing Rods placing on the recessed notch and
fastened with Allen Screws. Tighten with
Allen ranch.

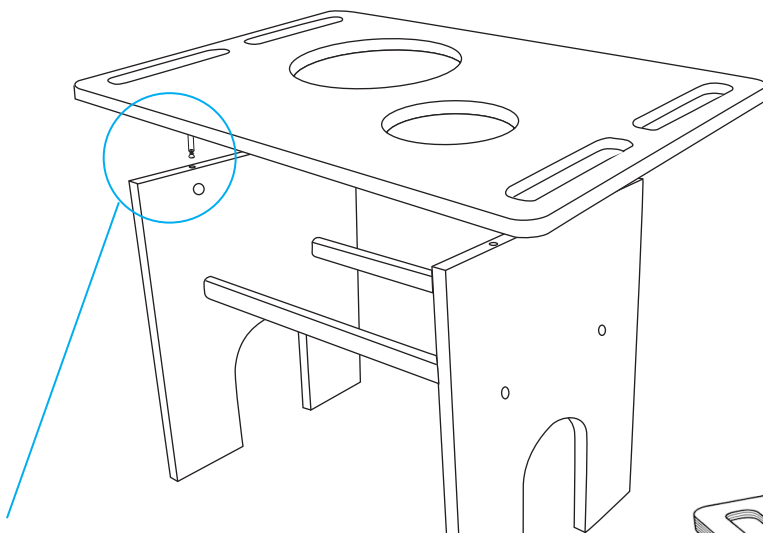

Make sure the toggle bolts are
inserted into the hole of both
side panels. Turn and tighten
the Toggle nuts with flat head
screw driver.

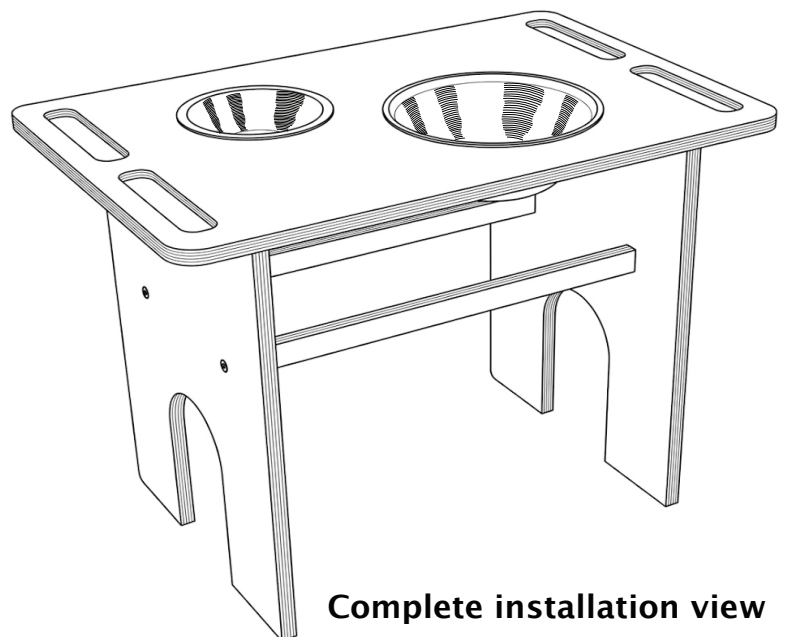

Complete installation view