


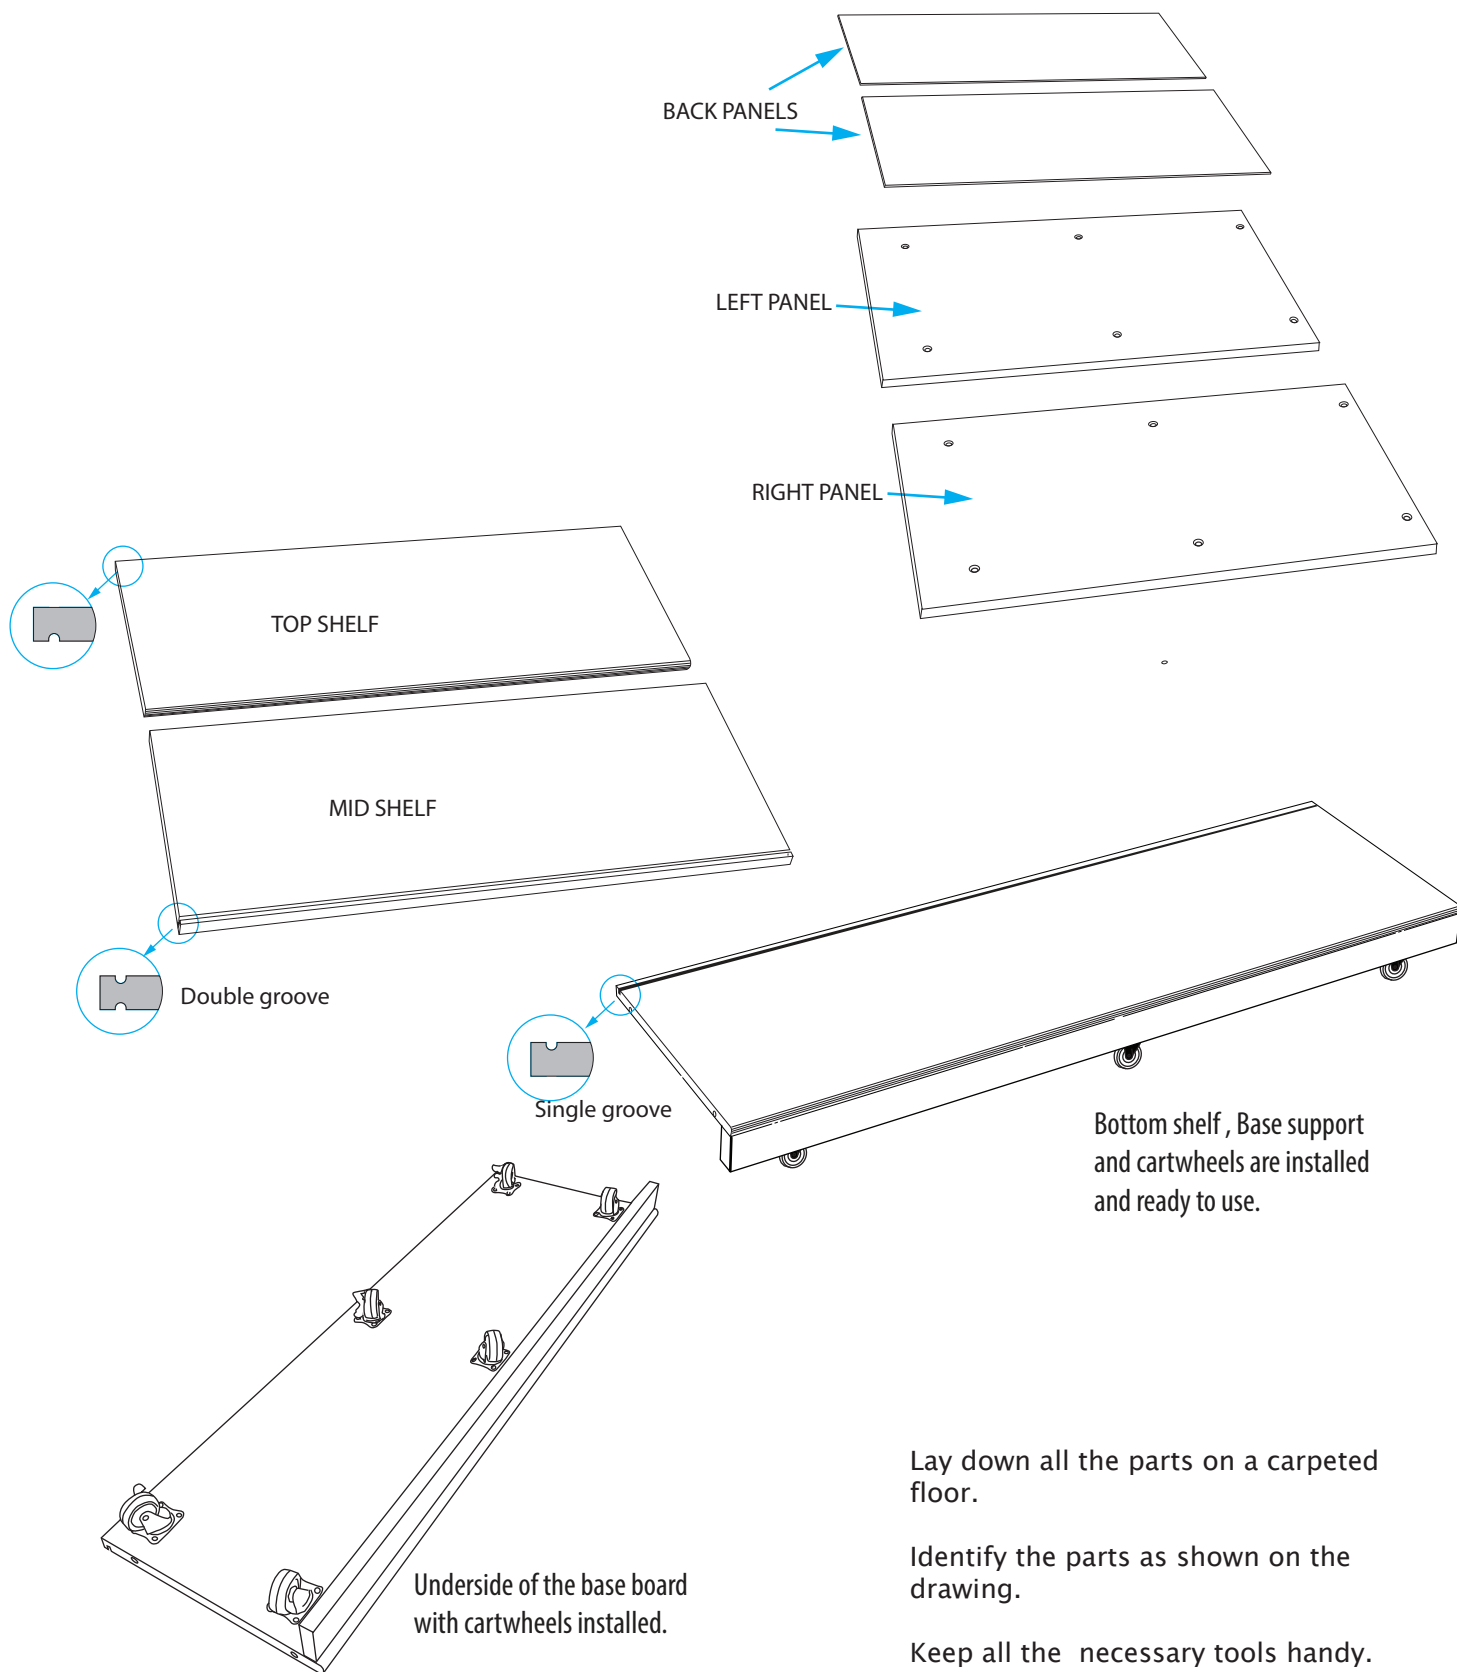




Lay down all the parts on a carpeted floor.

Identify the parts as shown on the drawing.

Keep all the necessary tools handy.


Follow the installation instructions.

Accessories & Tools required



F185 Solid Rubberwood Shelf w/Back

Aluminum bracket Qty- 4

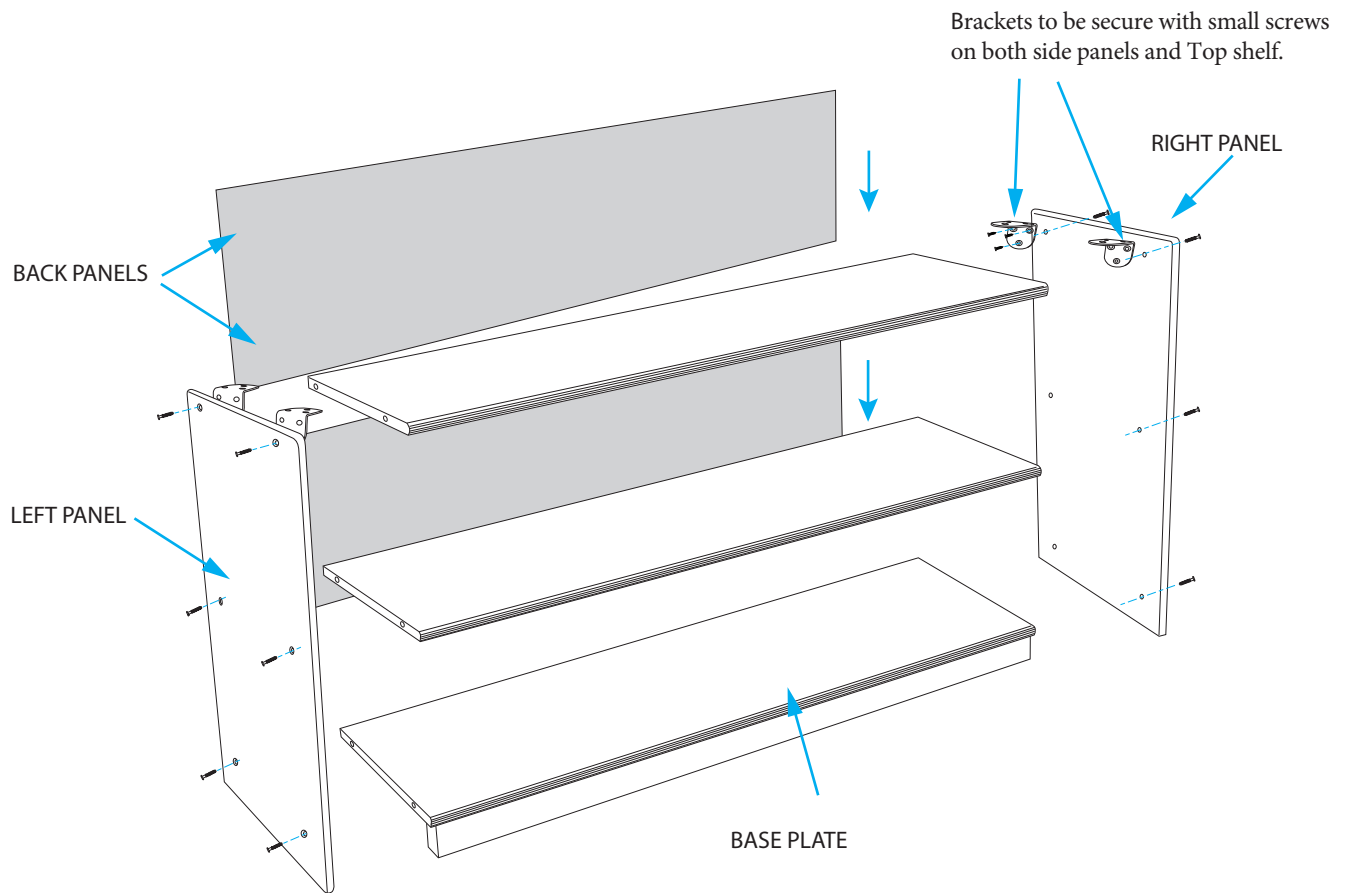


Step 1: Install two side panels, right and left on both side of Base Plate with Black Bolts.

Step 2: Install BOTTOM BACK PANEL in the grooves.

Step 3: Install Middle shelf as shown with Black Bolts.

Step 4: Insert back panels on the groove.

Step 5: Install the top shelf as shown with Black Bolts.

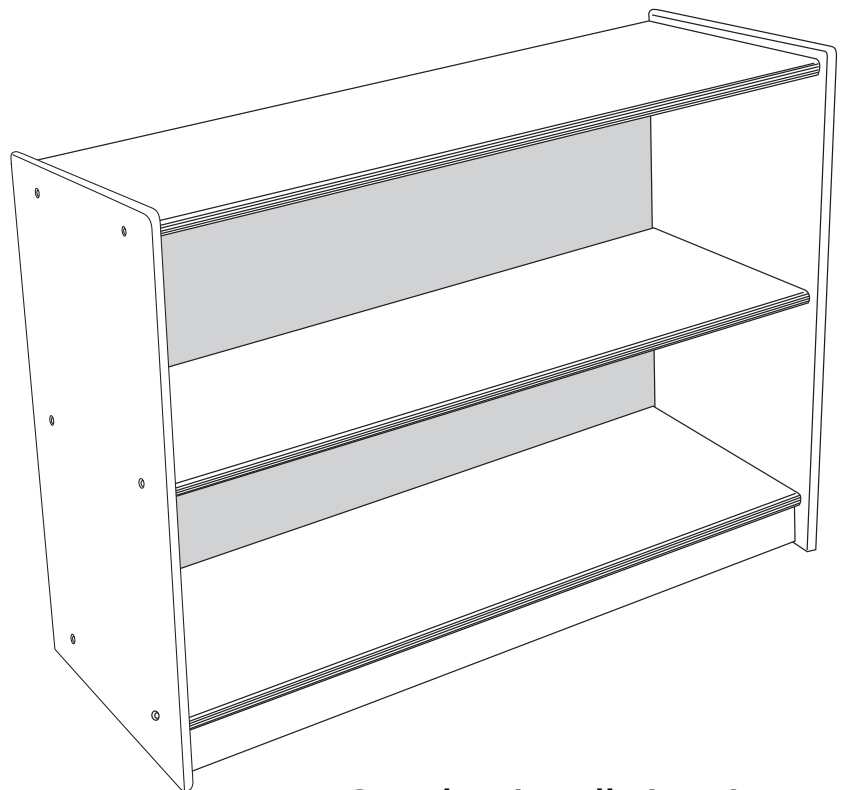

Complete installation view