


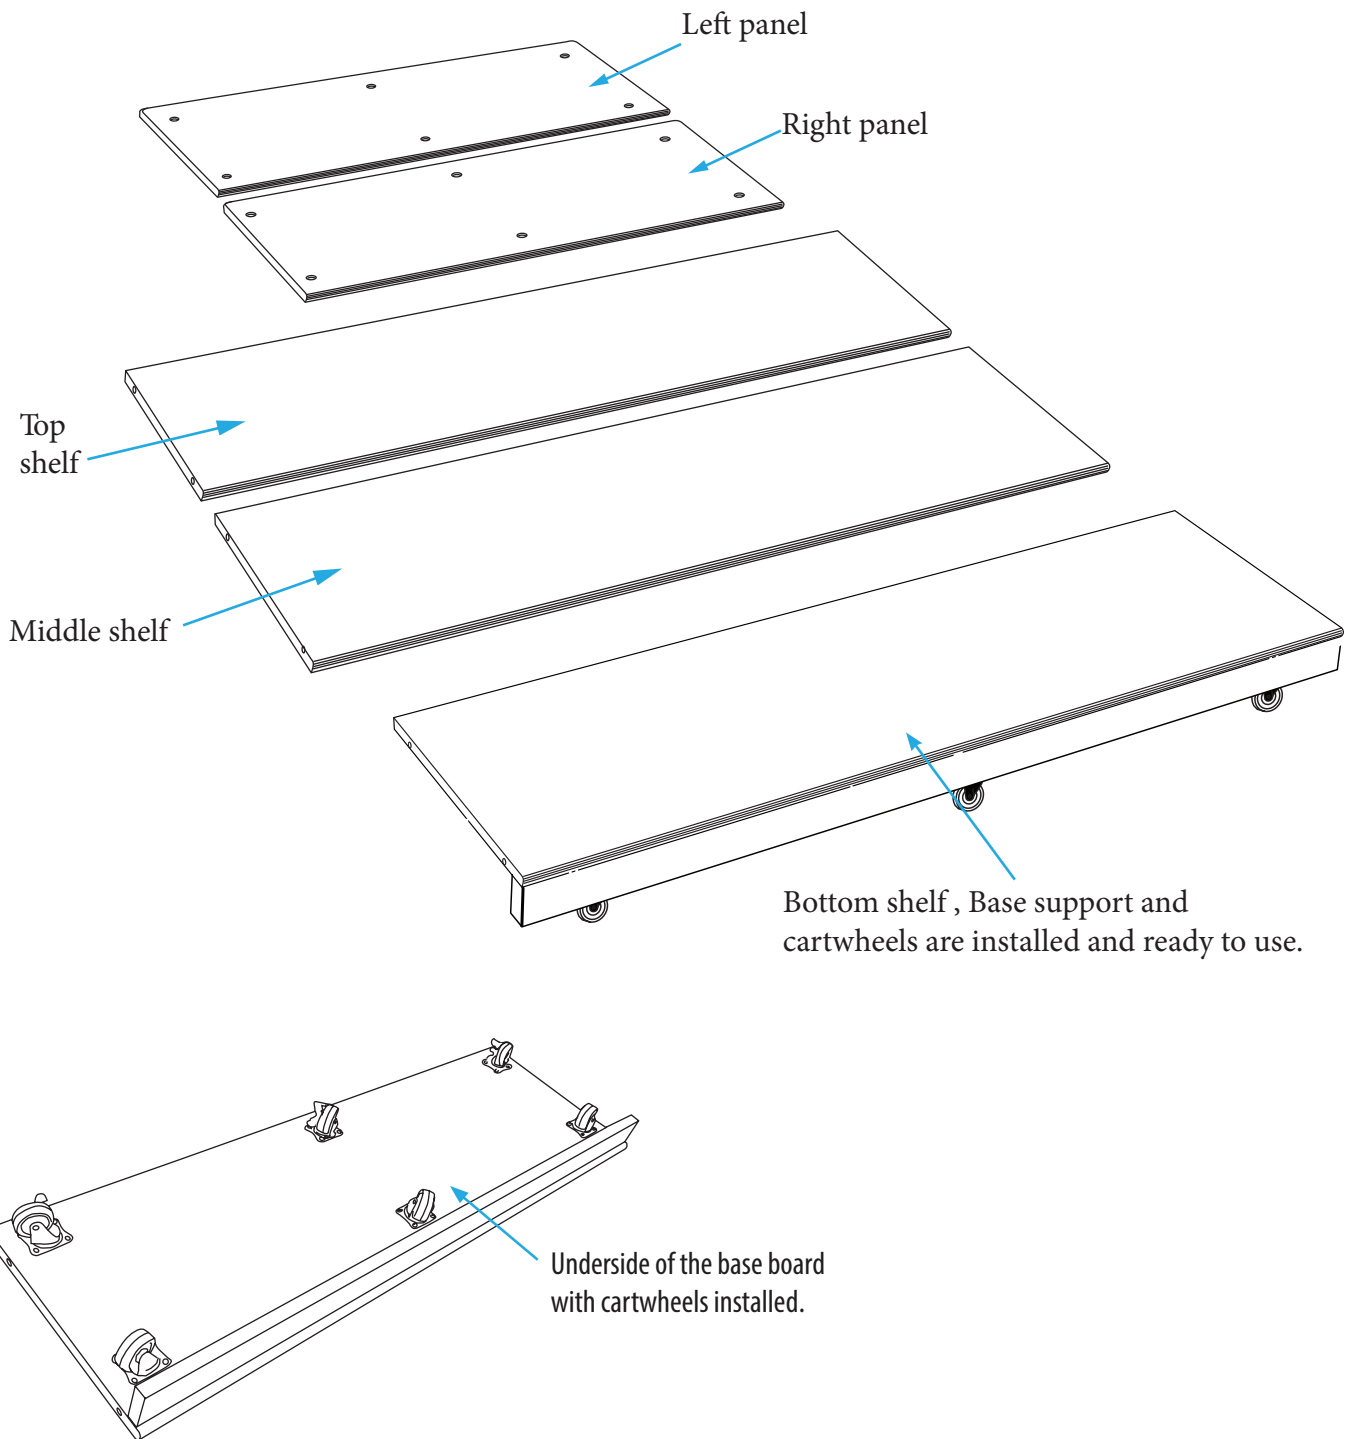





Unpack the box and check the parts and accessories prior installation. Place all wooden parts on carpeted area to avoid damage or scratch on surface.

Accessories & Tools required:



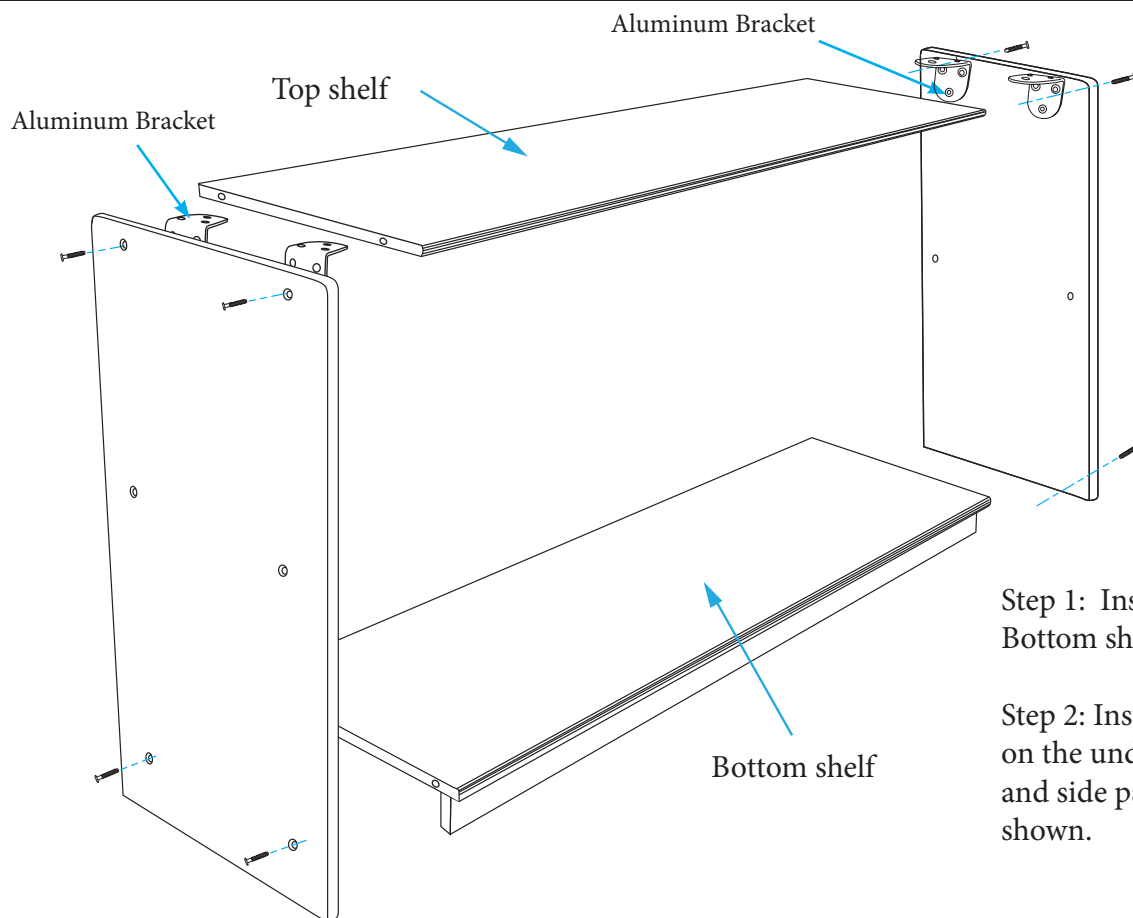


Step 1: Install both side panels to Bottom shelf with Allen Bolts.

Step 2: Install Aluminum Brackets on the under side of the top shelf and side panels with small screws as shown.

Step 3: Install Top shelf with Allen Bolts as shown.

Step 4: Install Mid shelf with Allen Bolts.
Tighten Allen Bolts with Allen wrench moderately.

Step 5: Place Plastic screw covers over side panel screw holes.

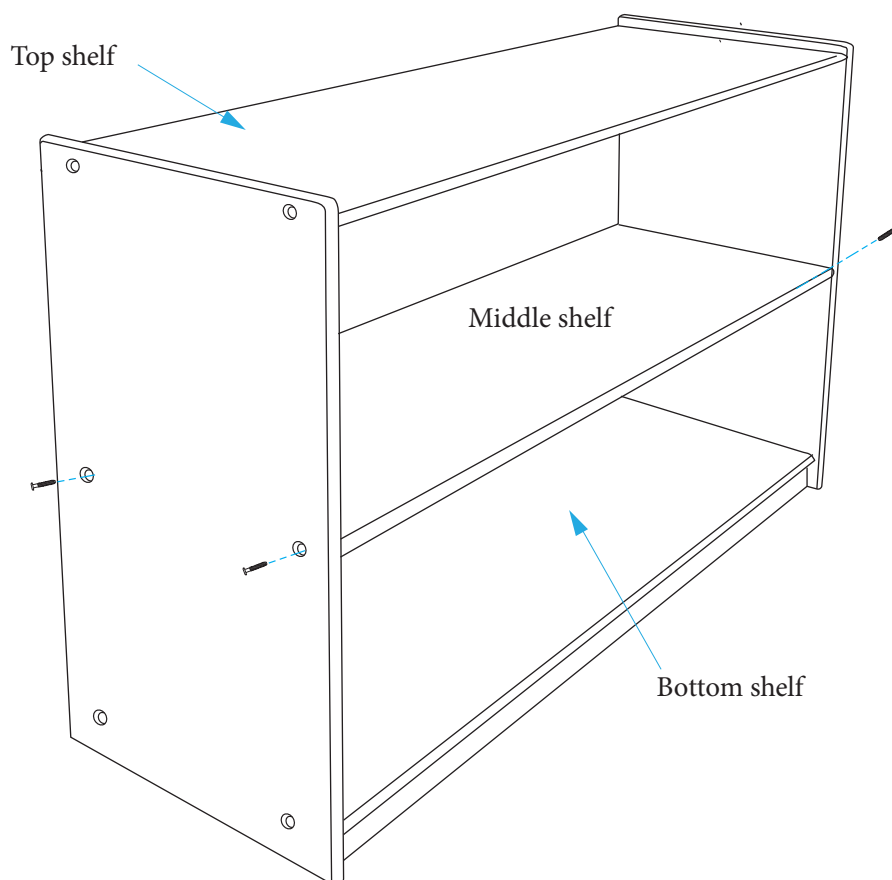

Complete installation view