



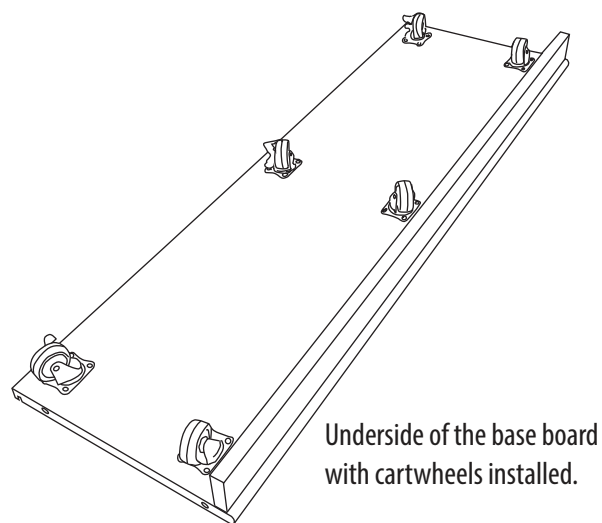

Unpack the box and check the parts and accessories prior installation.
Place all wooden parts on carpeted area to avoid damage or scratch on surface.

Accessories & Tools required

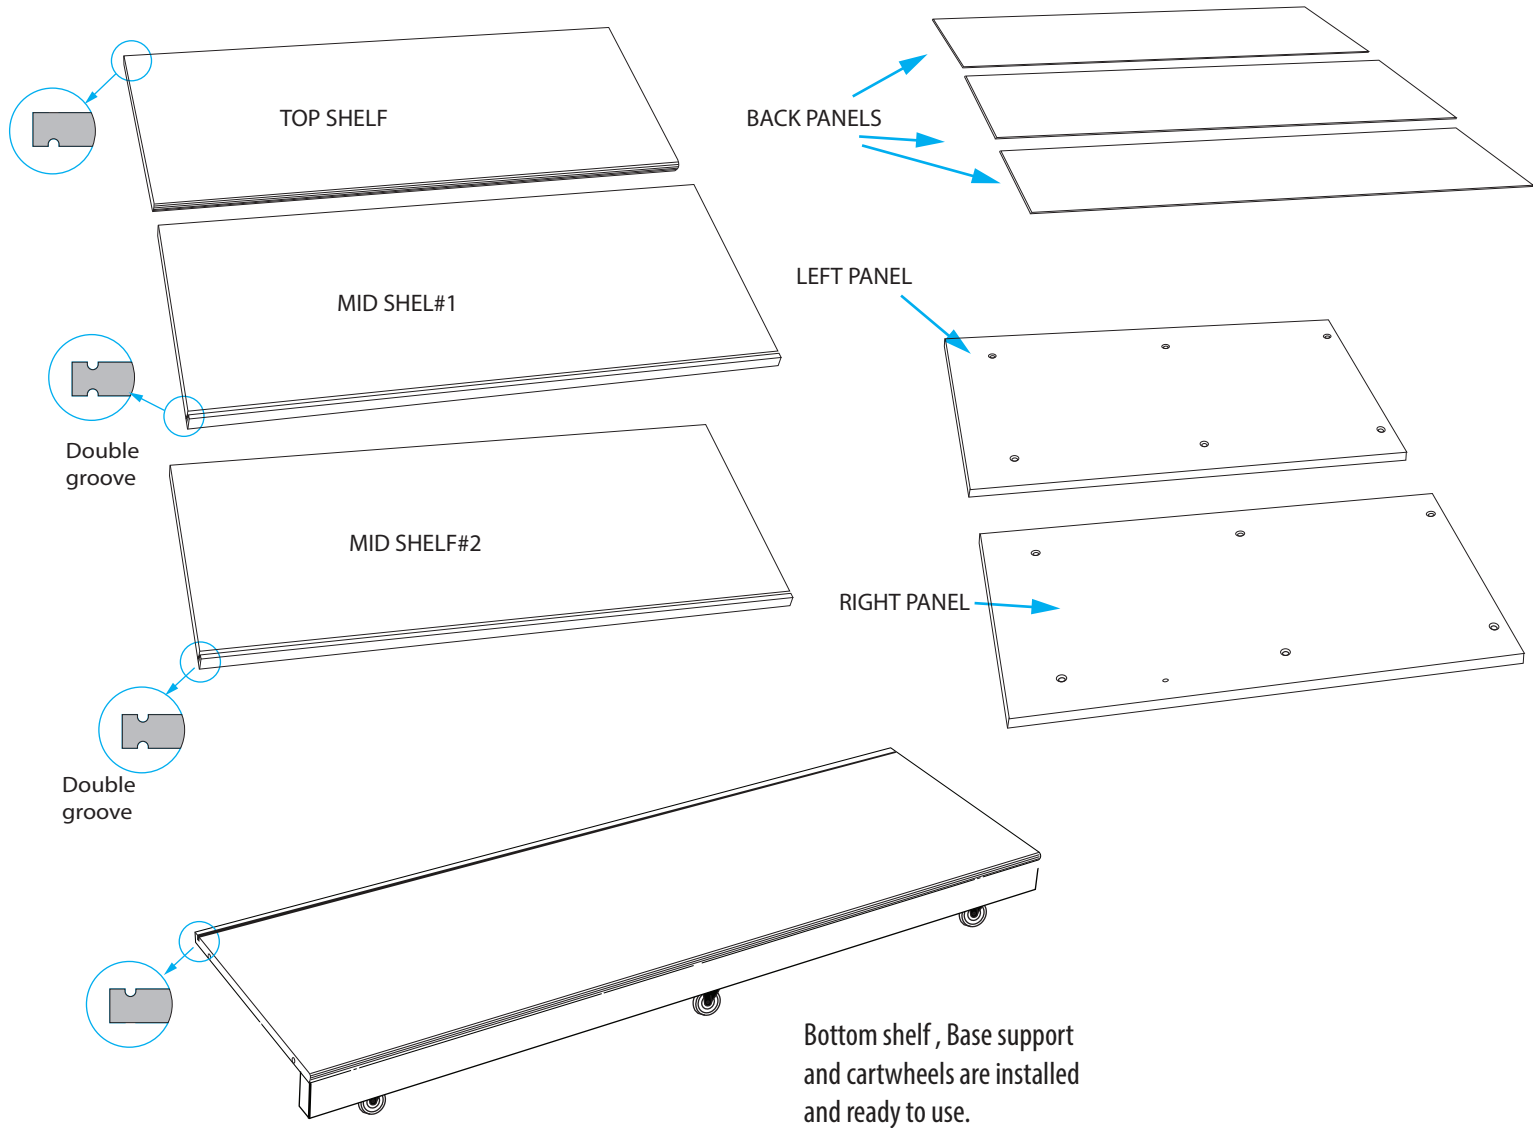

Allen wrench



Long Silver Allen Bolt-Qt-16




Small flat-head screw QT-24



Aluminum bracket Qty- 4



F61 Medium Rubberwood Shelf with Back

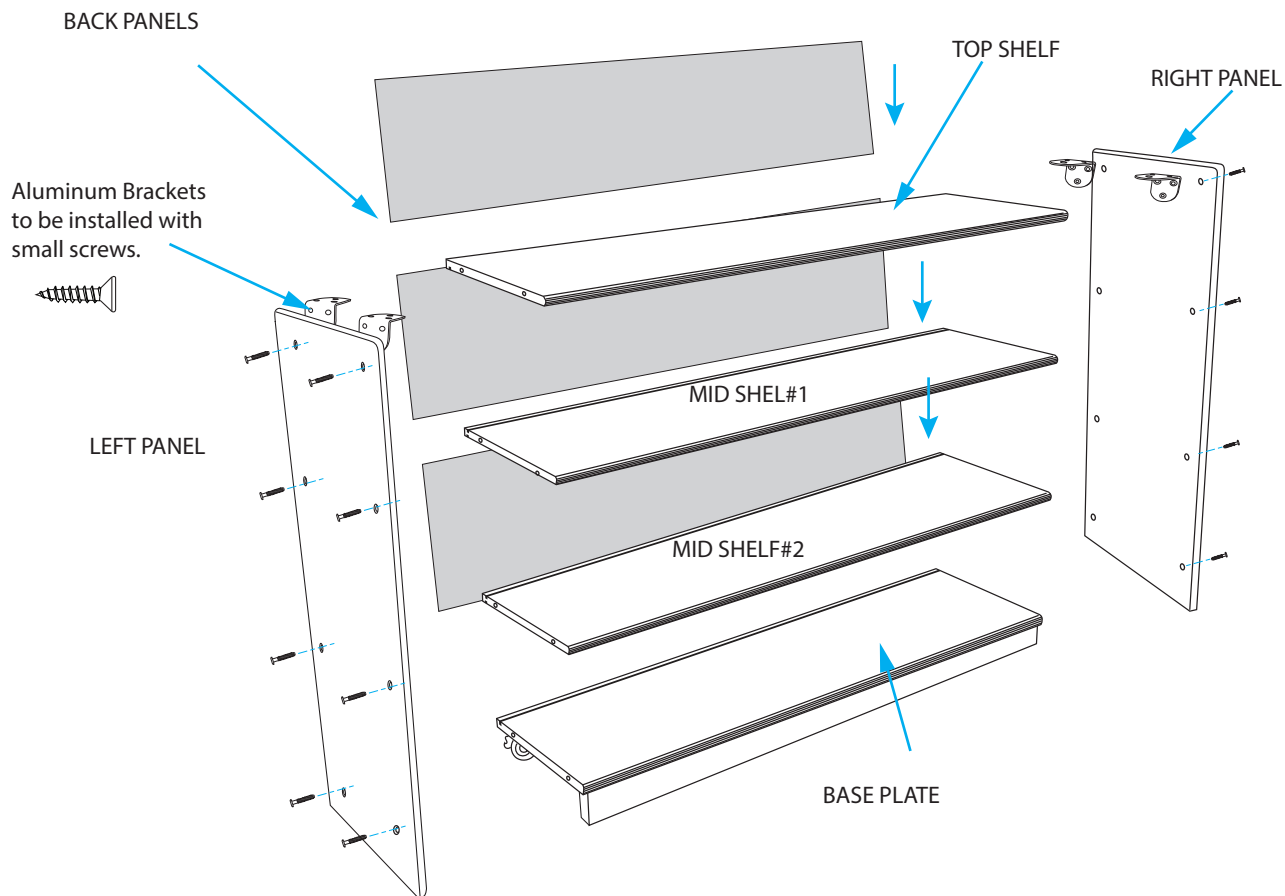

Step 1: Install two side panels, right and left on both side of Base Plate with Black Bolts.


Step 2: Install BOTTOM BACK PANEL in the grooves.

Step 3: Install Middle shelf #2 as shown with Black Bolts.

Step 4: Install Middle shelf #1 as shown with Black Bolts.

Step 5: Insert back panels on the groove.

Step 6: Install the top shelf as shown with Black Bolts.

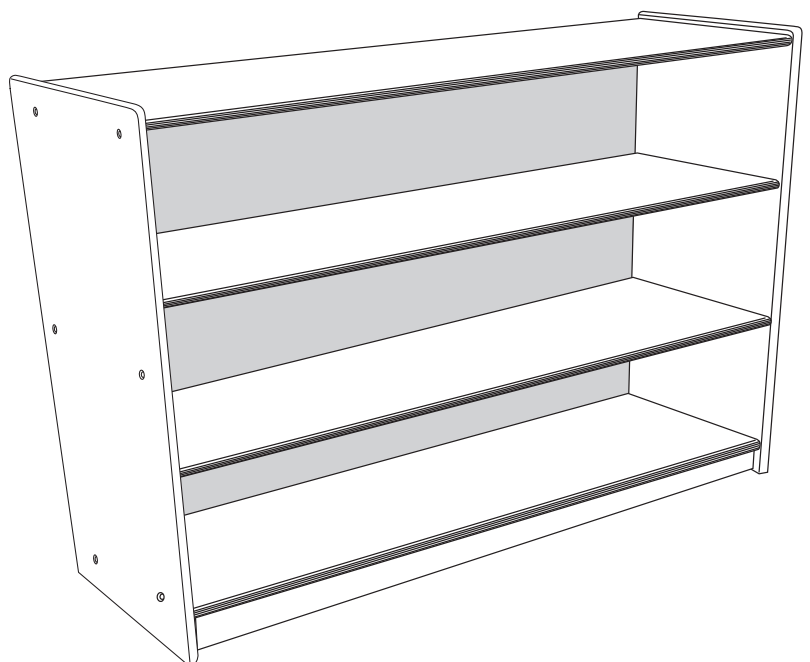

Complete installation view