



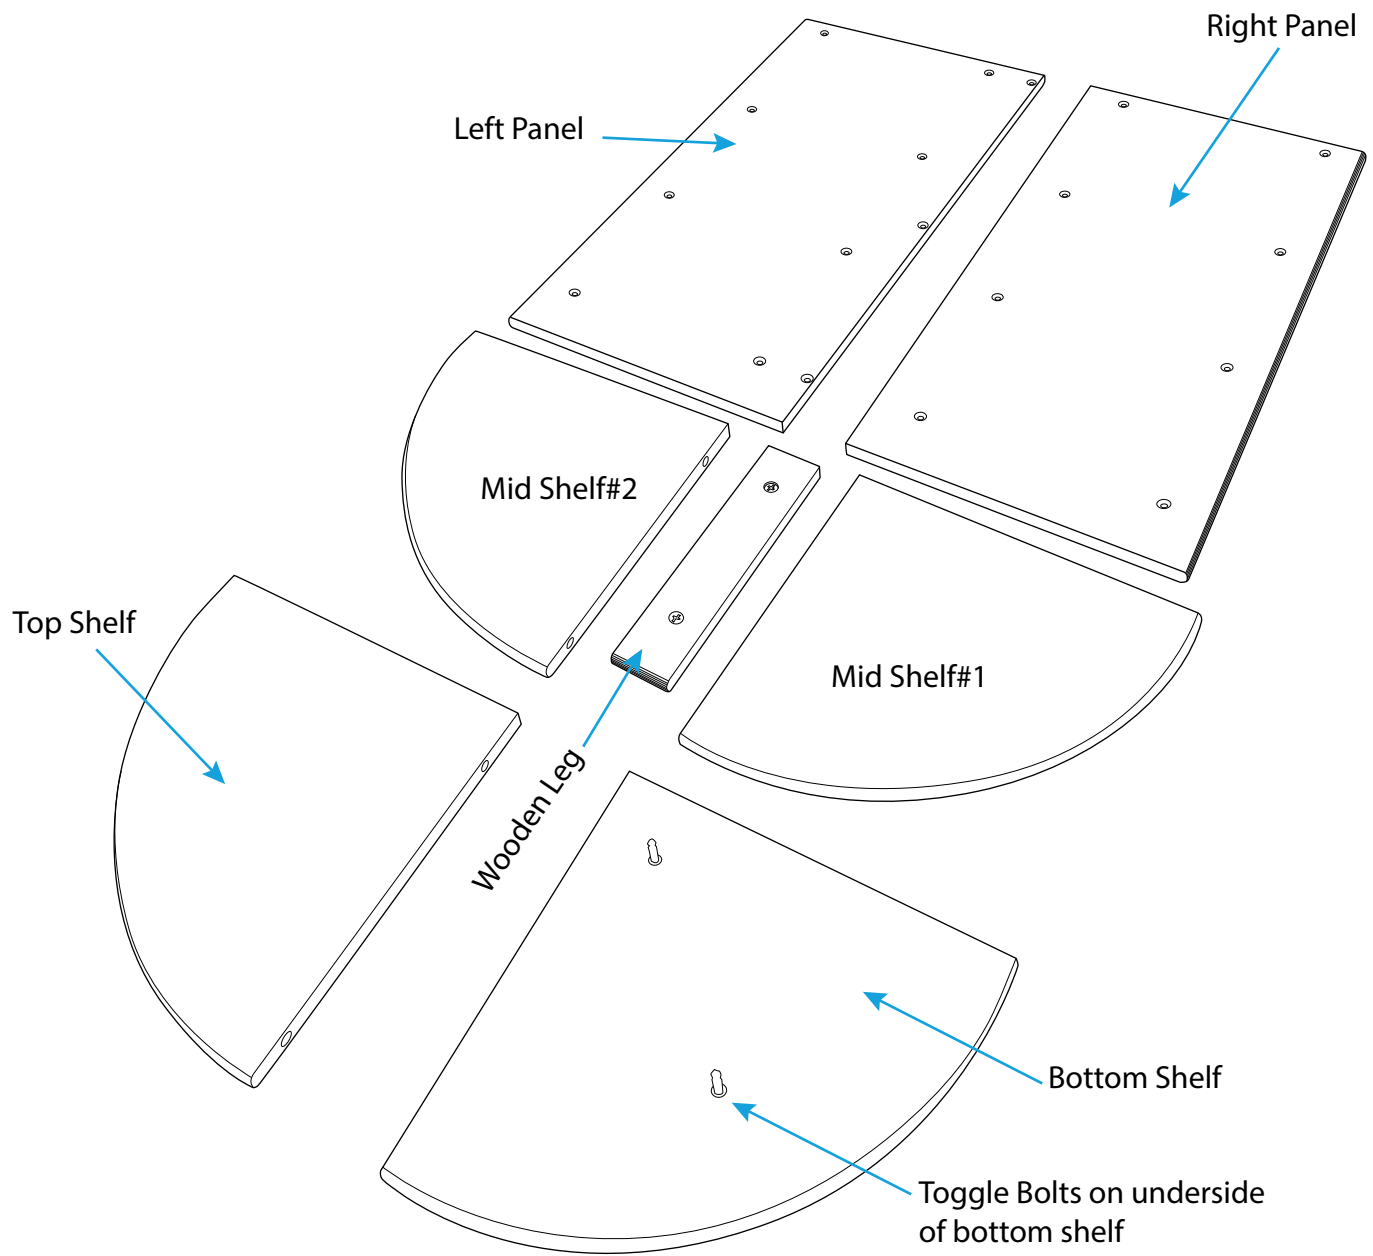


Unpack the box and check the parts and accessories prior installation.
Place all wooden parts on carpeted area to avoid damage or scratch on surface.


Accessories & Tools required:



Star head screwdriver QT-1

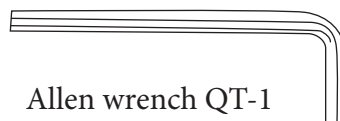


Allen wrench QT-1

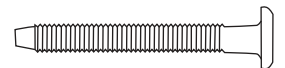

Black Allen Bolt QT-12




F61.C Medium Corner Rubber wood Shelf

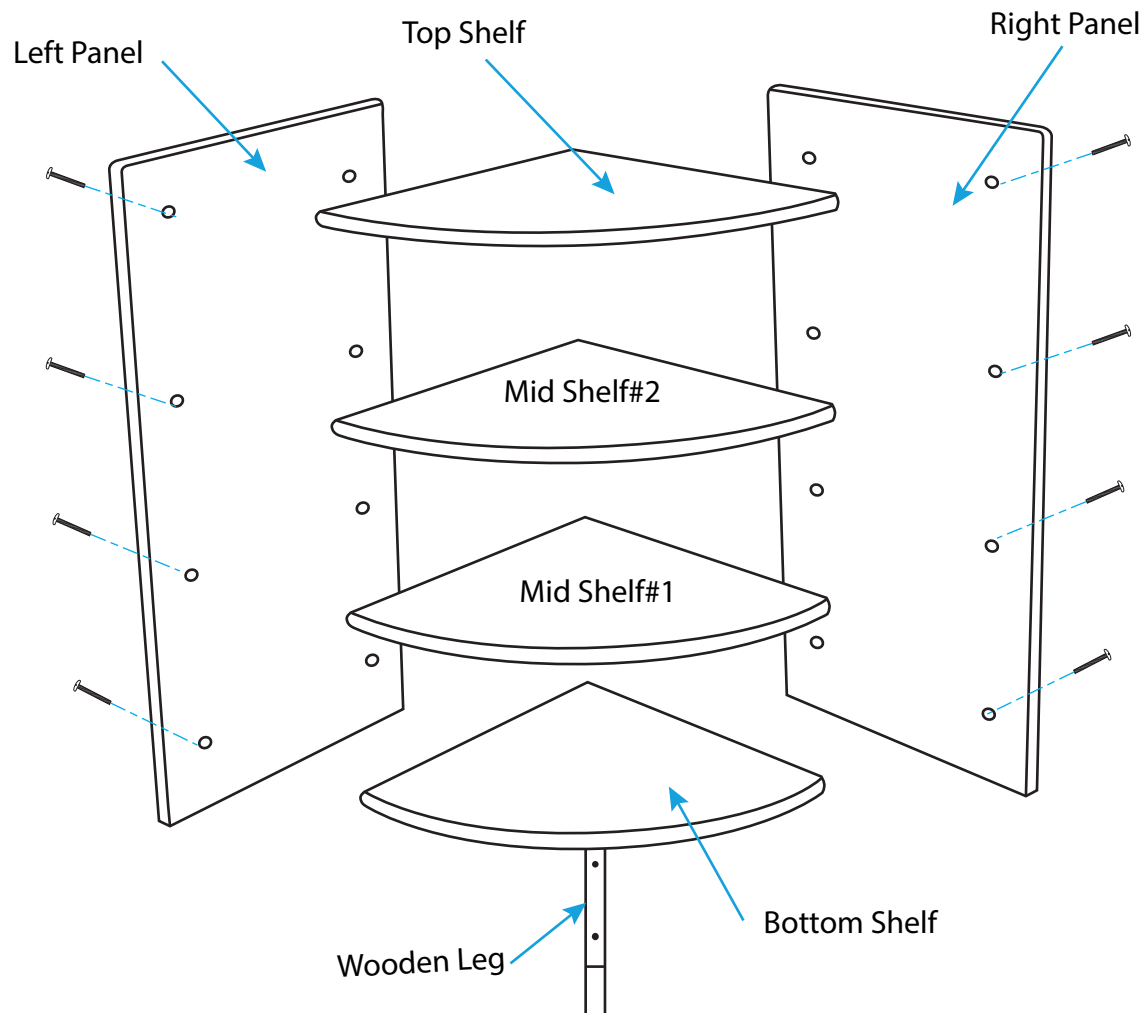

1st Step: Install Furniture leg to the bottom shelf (Toggle Bolt and Nuts) with Screw Driver

2nd Step: Install left and right Panels with bottom and Top Shelf.

3rd Step: Install middle shelves with Allen bolts.

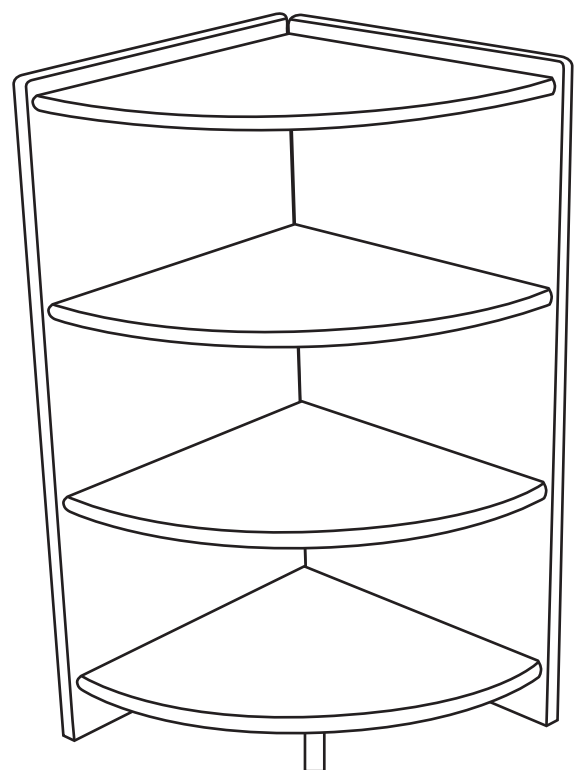

Complete installation view