



Instruction for assembly

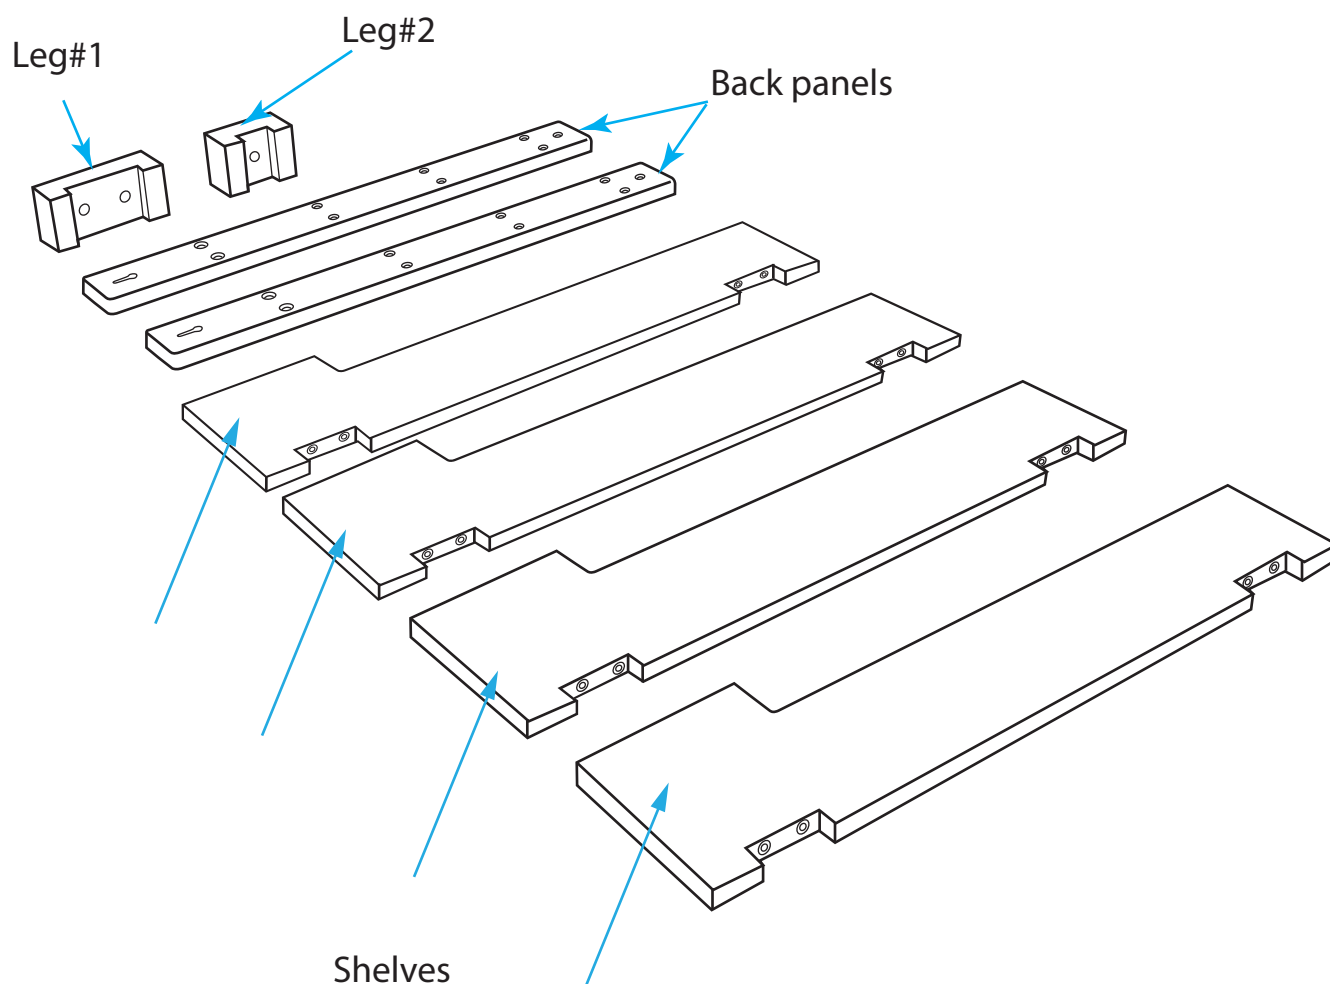


Unpack the box and check the parts and accessories prior installation.
Place all wooden parts on carpeted area to avoid damage or scratch on surface.

Accessories & Tools required:

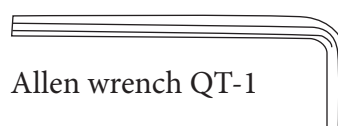


Allen wrench QT-1

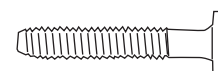

Allen Bolt QT-21




PF04 Stand for Cylinder Blocks & Knob less Cylinders

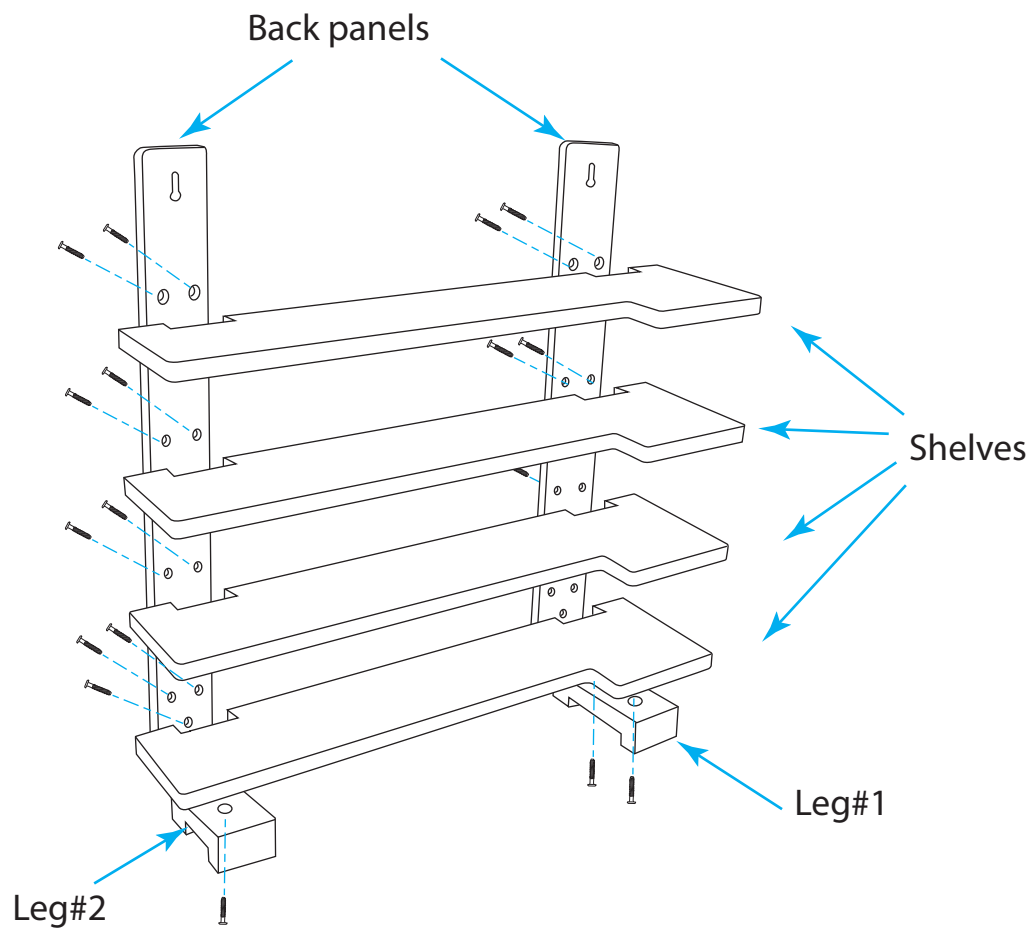

Step 1: Assemble Legs with back panels with Allen Bolts.

Step 2: Install all shelves from bottom to top as shown with Allen Bolts..

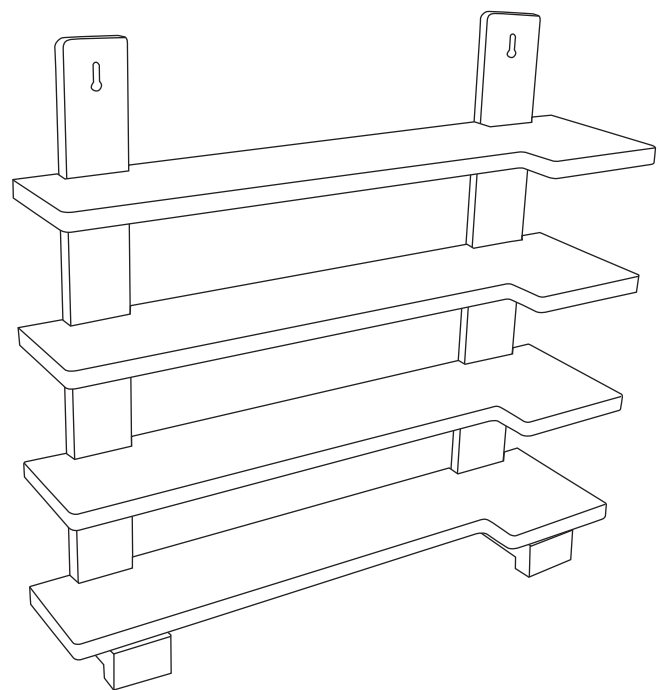

Complete installation view