

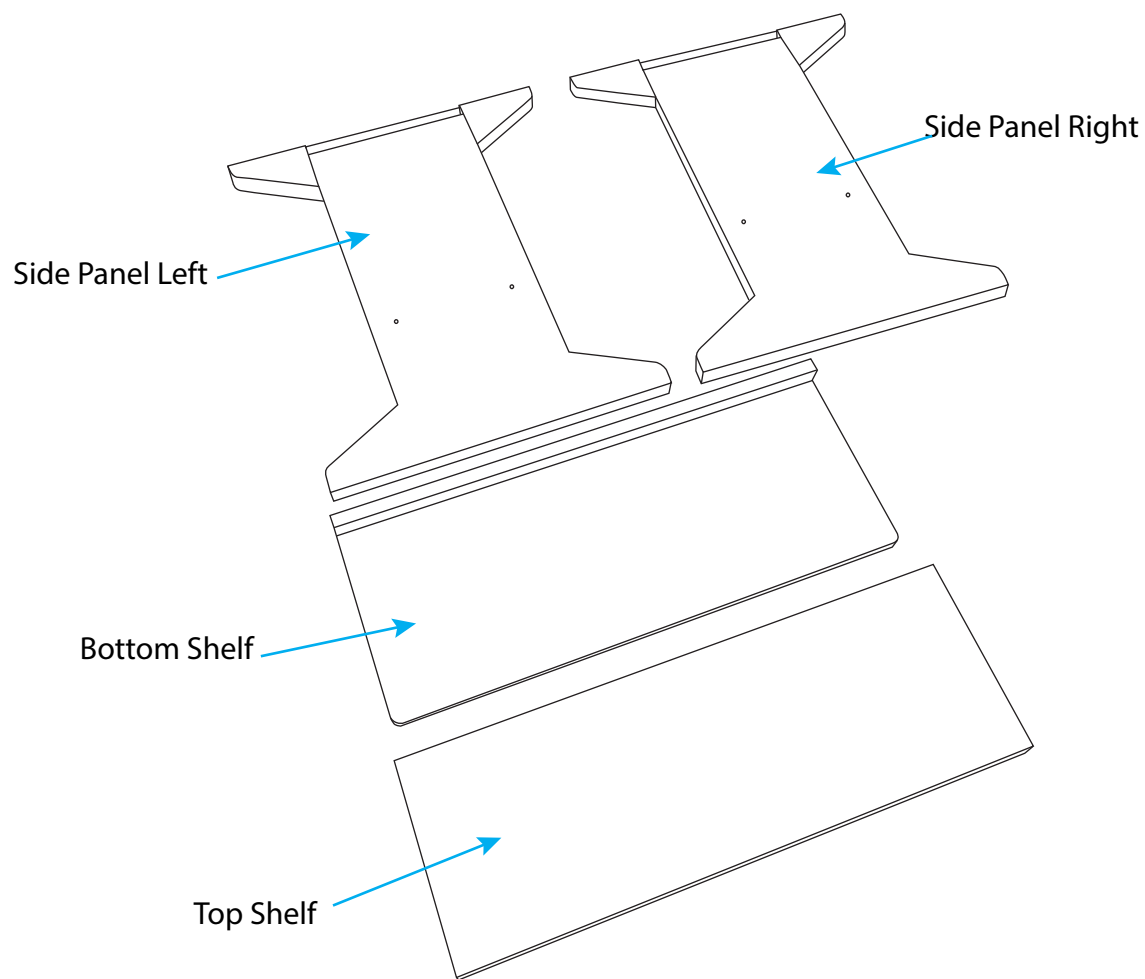




Unpack the box and check the parts and accessories prior installation.
Place all wooden parts on carpeted area to avoid damage or scratch on surface.


Accessories & Tools required:

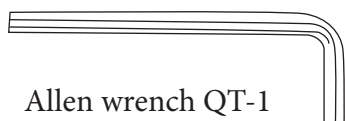

Black Allen Bolt QT-8



PF11 - Stand for the Farm

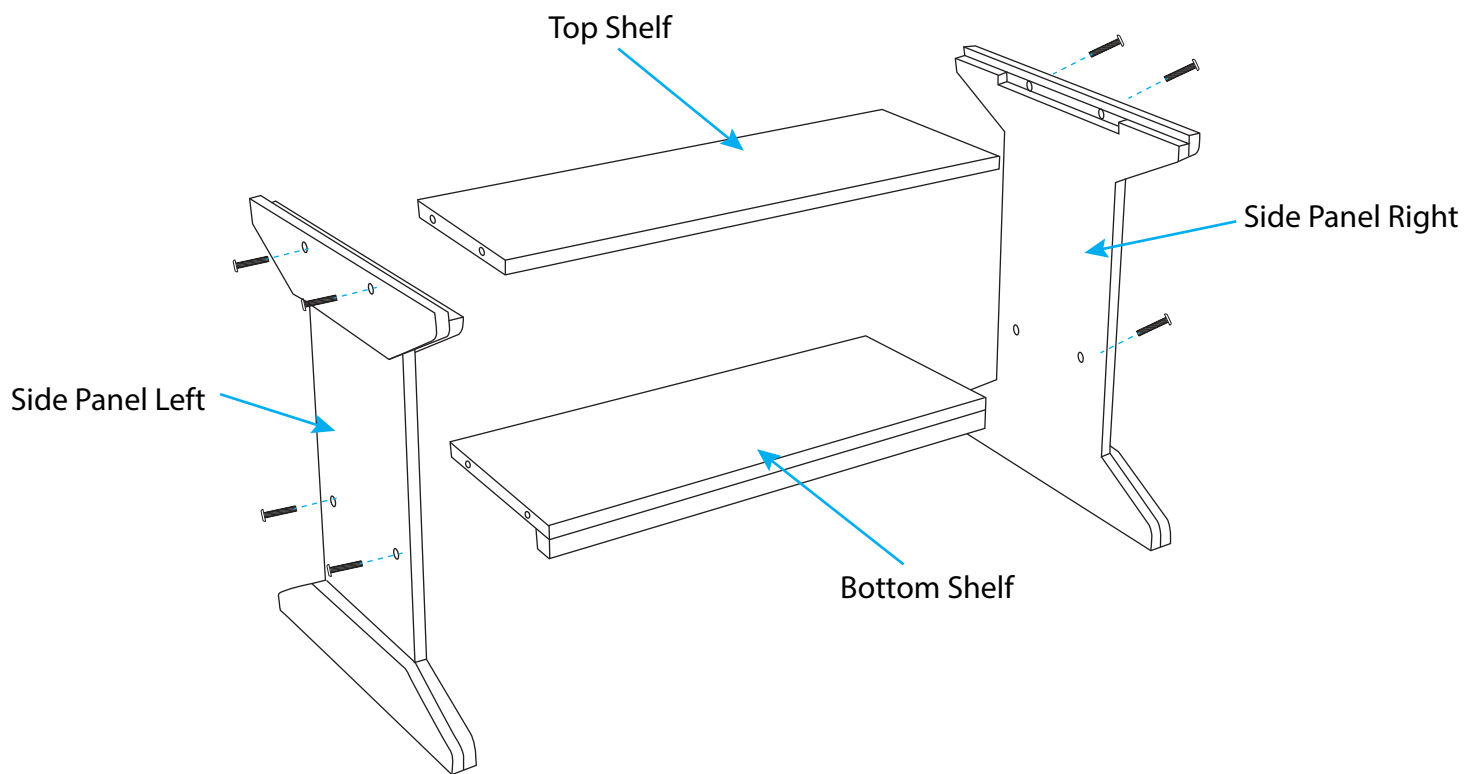

Step 1: Assemble Bottom Shelf with side panels as shown with Allen Bolts.

Step 2: Assemble Top shelf with Allen Bolts.

