




Side Panel Left

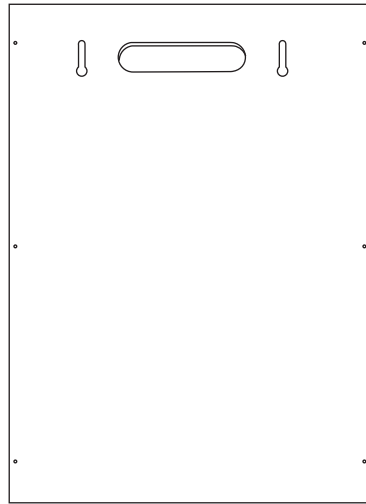

Back Panel

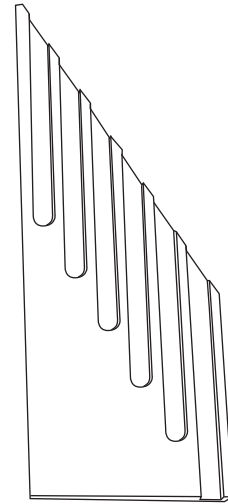


Side Panel Right

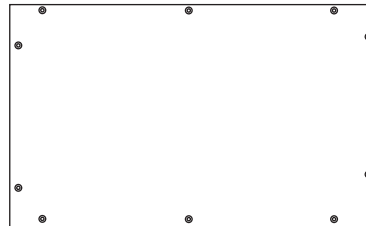


Front Panel

Accessories & Tools required:

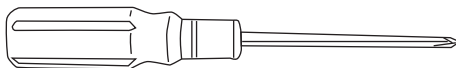


Star head screwdriver QT-1

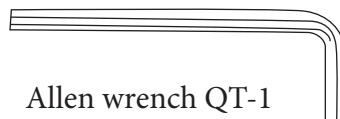

Allen wrench QT-1




Black Bolt QT-10



Small flat-head
screw QT-10




PP13 - Cabinet for Dressing Frames (Premium Quality)

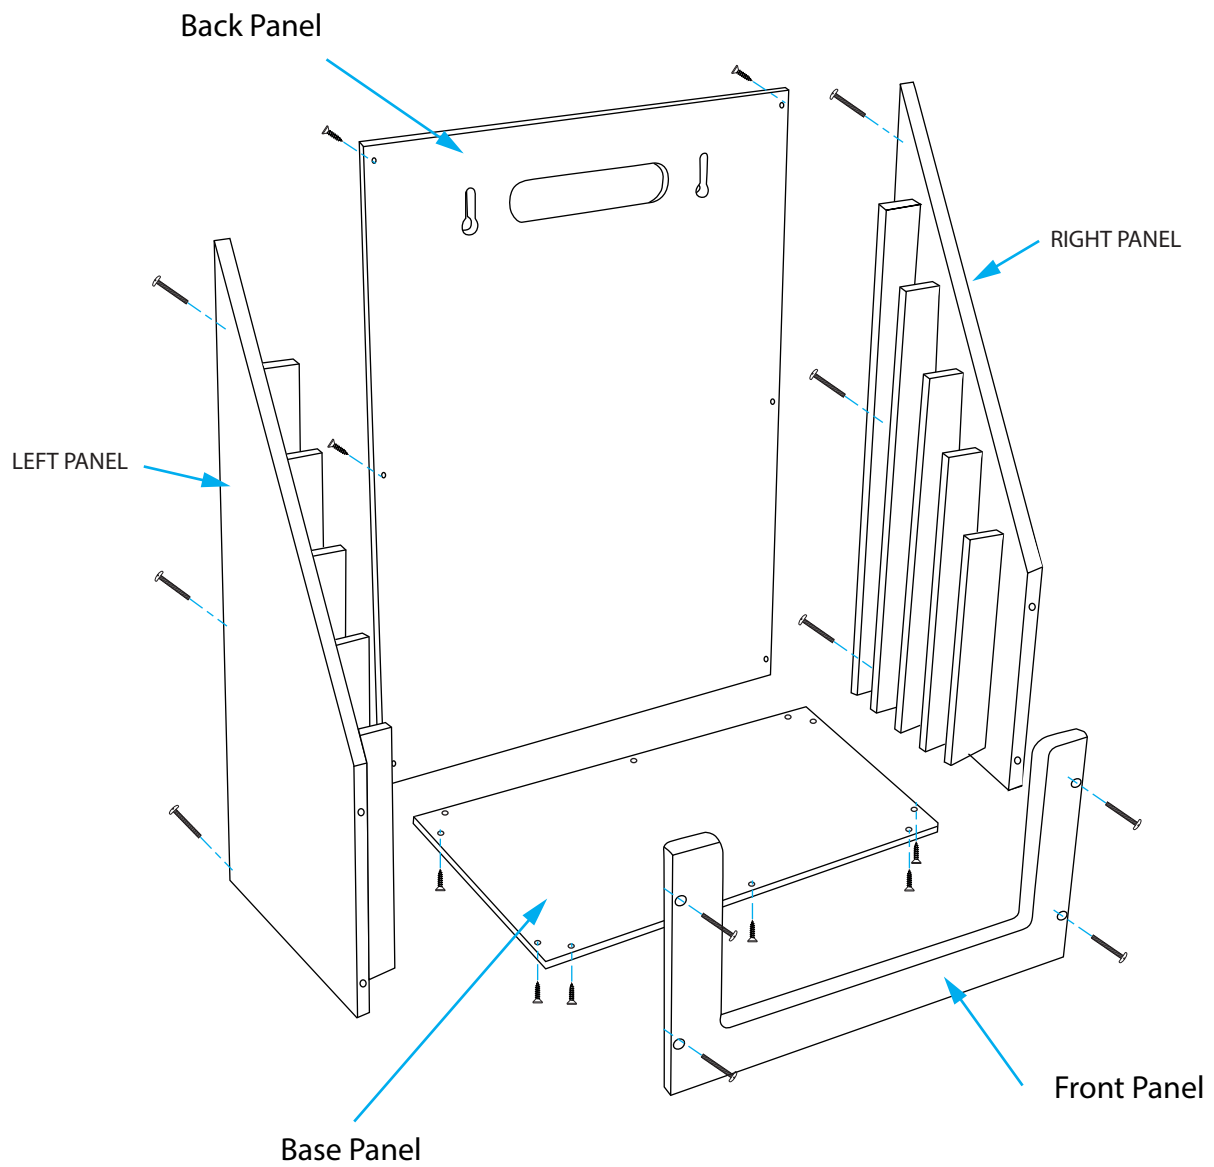

Step 1: Install two side panels and Back Panel with Bolts.

Step 2: Install Base panel with screws as shown.

Step 3: Install Front Panel with bolts.

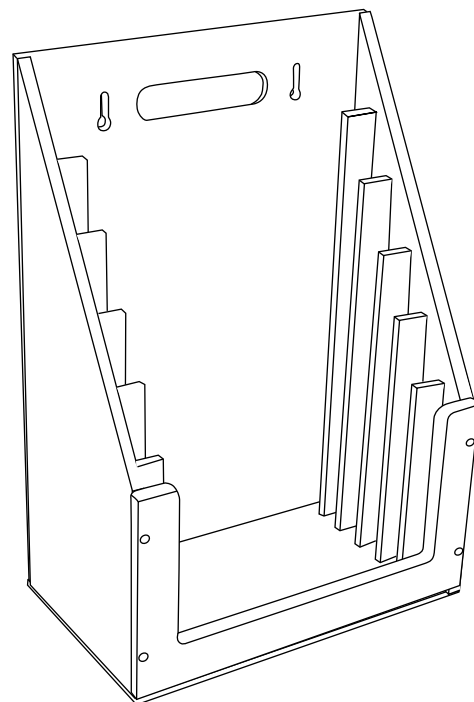

Complete installation view