



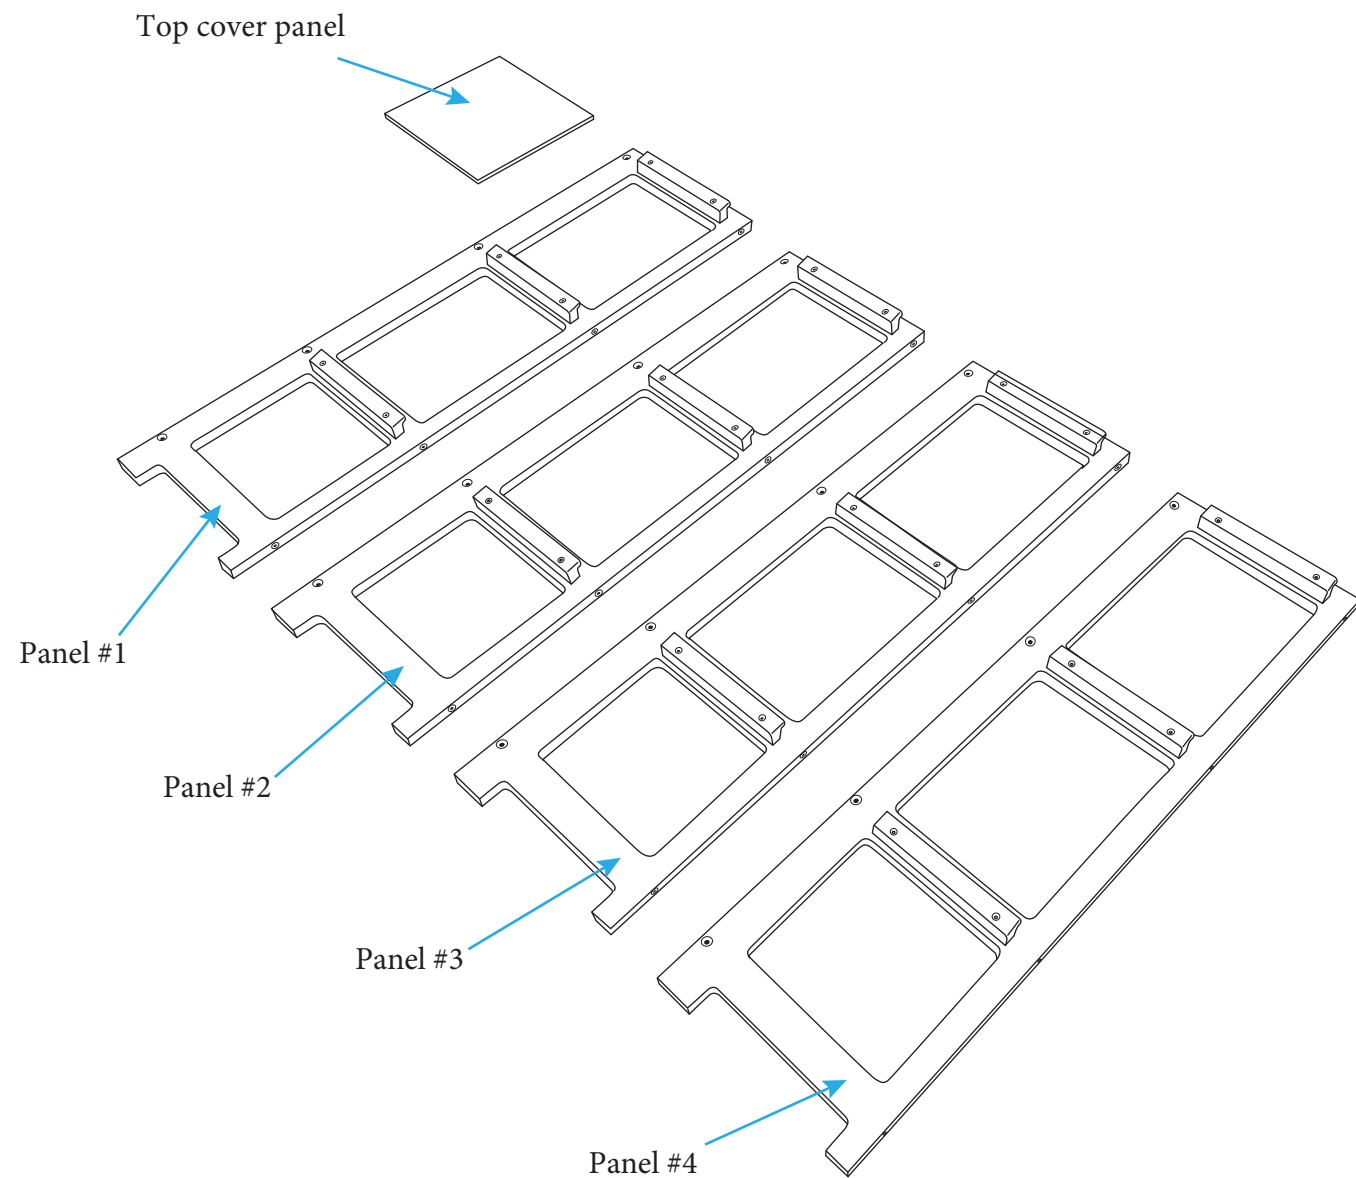


Unpack the box and check the parts and accessories prior installation.
Place all wooden parts on carpeted area to avoid damage or scratch on surface.

Accessories & Tools required:

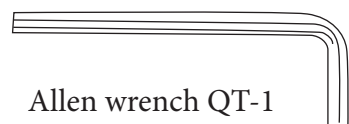


Allen wrench QT-1



Allen Bolt QT-16




PP14-Dressing Frame

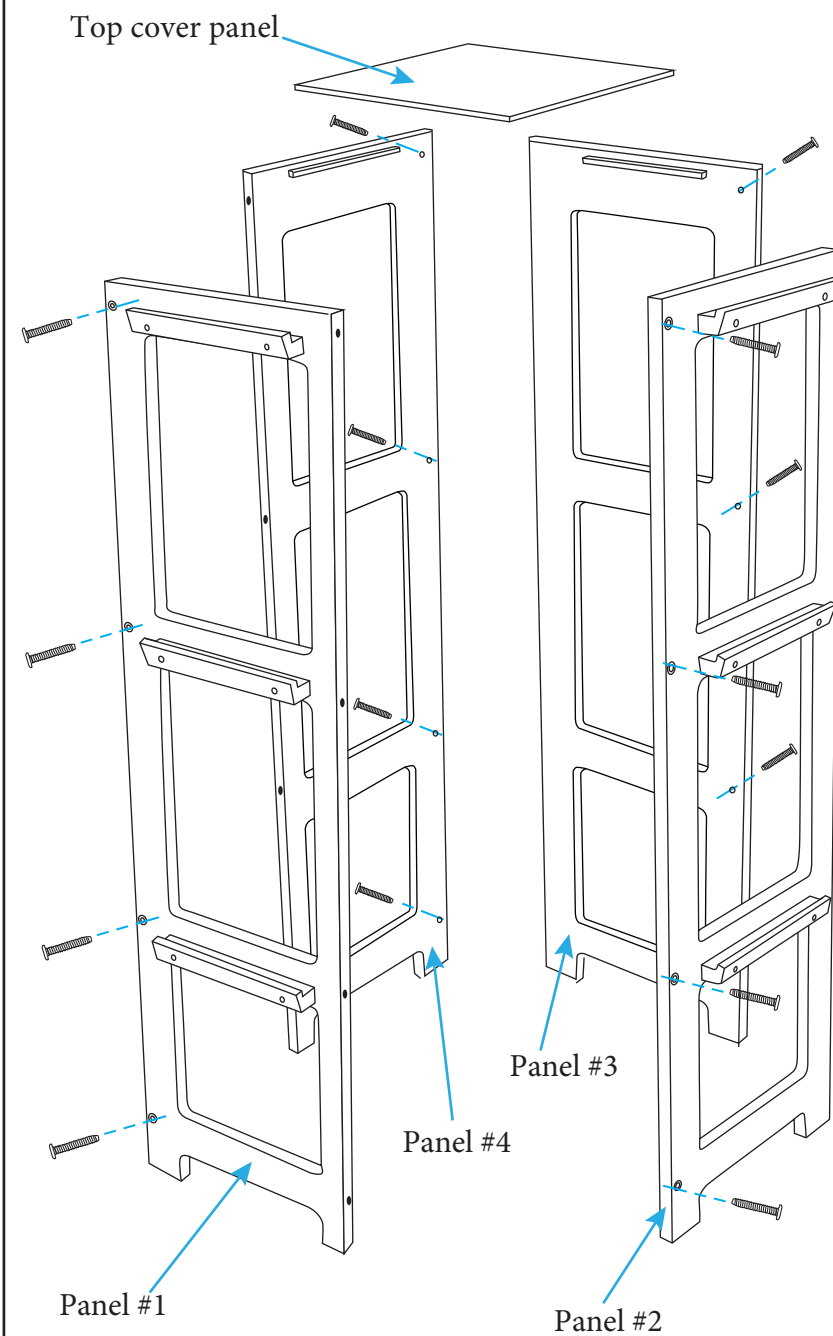

Step 1: Assemble Panel #2 to #1,
#4 to #3 with Allen Bolts.

Step 2: Attach #1 to #4 and #3 to #2.
Tighten gently with Allen Wrench.

Step 3: Install the Top Cover last.

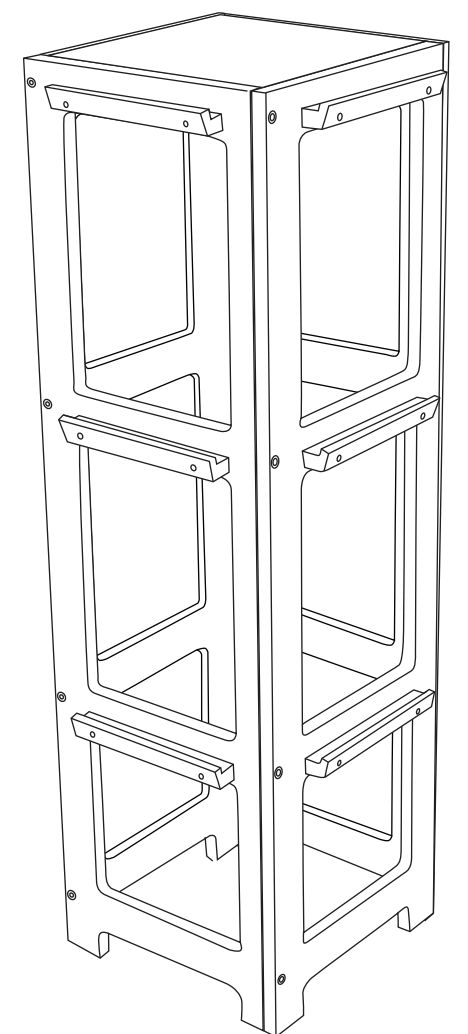

Complete installation view